




CATER-COOL COMMERCIAL DUAL ZONE WINE COOLER INSTALLATION USE & SERVICE MANUAL

Please read this manual carefully prior to use & keep it in a convenient place for future reference.

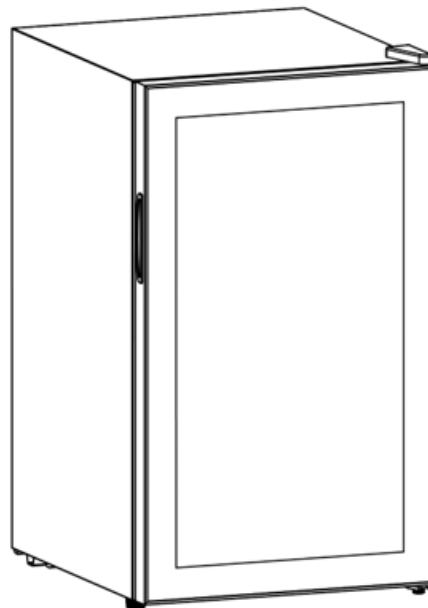

APPLIES TO CK6043

Thank you for purchasing our Cater-Cool Dual Zone Wine Cooler. To ensure proper operation of this cooler, please read the instruction manual carefully before use and please keep near the product.

CATERKWIK, The Lakeland Catering Centre, Newlands, Ulverston, Cumbria, LA12 7 QQ. Tel: 01229 480001 | Email: INFO@CATERKWIK.CO.UK

CATER-KWIK LTD

Internet Prices With Traditional Service Est. 1994

CONTENTS:

Important Safety Instructions.....3
Installation Instructions.....4
Operating Your Wine Cooler.....5
Control Panel.....6
Troubleshooting.....7

CATER-KWIK LTD

Internet Prices With Traditional Service Est. 1994

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electrical shock or injury when using your appliance, follow these basic precautions:

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- To avoid hazards due to instability of the appliance, it must be fixed in accordance with the installation instructions.
- Do not store explosive substance such as aerosol cans with a flammable propellant inside the appliance.
- For appliance which use flammable insulation blowing gases, the instructions shall include information regarding disposal of the appliance.
- The lamp should be changed by professionals.

INSTALLATION INSTRUCTIONS

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your unit on a floor that is strong enough to support the unit when it is fully loaded. To level your unit, adjust the levelling legs at the bottom of the unit.
- This appliance is NOT designed to be installed inside of a cabinet where the front is covered by any type of door.
- Allow 10cm of space between the top, back and sides of the unit, which allows the proper air circulation to cool the compressor and condenser
- Locate the unit away from direct sunlight and source of heat (stove, heater, radiator etc.)
- Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorised Avanti Products service centre.
- After plugging the appliance into a wall outlet, allow the unit to cool down for 2-3 hours before placing food in the appliance compartment.

Please remember to keep some water in the cabinet to keep the humidity.

Disposal:

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Disposal should only be done through public collection points.

OPERATING YOUR WINE COOLER

It is recommended you install the wine cooler in a place where the ambient temperature is between 23°C / 26°C. If the ambient temperature is above or below recommended temperatures. The performance of the unit may be affected. For example placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate. The range may not be reached.

TEMPERATURE RANGES FOR YOUR WINE COOLER:

- Upper Zone – 5°C / 13°C.
- Lower Zone – 13°C / 18°C.

Please remember to keep some water in the cabinet to keep the humidity.

Disposal:

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Disposal should only be done through public collection points.

Installation:


 

Appliance should be placed on a horizontal floor and with clearance for ventilation. Don't try to replace or repair any components by yourself, ask the service agency for help if necessary. Always handle the appliance with care to avoid damaging the unit.

CONTROL PANEL



Temperature

Control:

- You can turn the interior light ON of OFF by pushing the button once. The light will be turned off automatically if ON for 10 minutes. To turn back on, press the button  again.
- You can select the temperature display from Celsius to Fahrenheit by pushing the button for 2 seconds.
- Your wine cooler has been equipped with an “automatic control panel lock that will activate 20 seconds after the last time a button has been pressed.” 
- Push the button for 2 seconds to unlock the control panel. You will hear a BEEP to alert you the control panel is now active.
- Push the  button once to set the upper zone temperature & twice to set the lower zone temperature.
- You can set the temperature by pushing on the ^ or v buttons on the control panel. ^ will increase by 1°C, v will decrease temperature by 1°C.

When you use the wine cooler for the first time or restart the wine cooler after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one that is indicated on the display. This is normal and it is due to the length of activation time. Once the wine cooler is running for a few hours, everything will revert back to normal and the reading will be accurate again.

TROUBLESHOOTING GUIDE

You can solve many common unit problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

PROBLEM	POSSIBLE CAUSE
Unit does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse. The unit temperature control is set at "0"
Turns on and off frequently.	The room temperature is hotter than normal. A large amount of food has been added to the unit. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The unit does not have the correct clearances.
Vibrations.	Check to assure that the unit is level.
The unit seems to make too much noise.	The rattling noise may come from the flow of the refrigerant which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your unit. Contraction and expansion of the inside walls may cause popping and crackling noises. The unit is not level.
The door will not close properly.	The unit is not level. The door was reversed and not properly installed. The gasket is dirty or bent. The shelves, bins or baskets are out of position.



**CATERKWIK, The Lakeland Catering Centre,
Newlands, Ulverston, Cumbria, LA12 7 QQ.**

Tel: 01229 480001 | Email: INFO@CATERKWIK.CO.UK



CATER-KWIK LTD

Internet Prices With Traditional Service Est. 1994