

# Caterlite

## Oven

### Instruction manual



**(NL)** Convectionoven  
Handleiding

**(FR)** Four à convection  
Mode d'emploi

**(DE)** Konvektionsofen  
Bedienungsanleitung

**(IT)** Forno a convezione  
Manuale di istruzioni

**(ES)** Horno de Convección  
Manual de instrucciones

**(PT)** Forno de convecção  
Manual de instruções

**Model • Modèle • Modell • Modello • Modelo • Malli:  
CM272-**

# Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - BS EN Codes of Practice
  - Fire Precautions
  - IEE Wiring Regulations
  - Building Regulations
- DO NOT immerse the appliance in water.
- Some surfaces become hot during operation - take care when using the appliance.
- Always wear suitable protective clothing when using the oven.
- DO NOT allow anything to come in to contact with the heating elements during use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a Caterlite agent or a recommended qualified technician in order to avoid a hazard.
- When operating the oven keep at least 12cm of space on all sides of the oven to allow for adequate air circulation

# Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Caterlite product.

# Pack Contents

 
 
The following is included:

- Caterlite Oven
- Wire Shelf
- Baking Tray and Handle
- Rotisserie Fork Assembly and Handle

Caterlite prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.


Should you find any damage as a result of transit, please contact your Caterlite dealer immediately.

# Operation

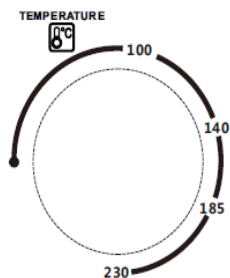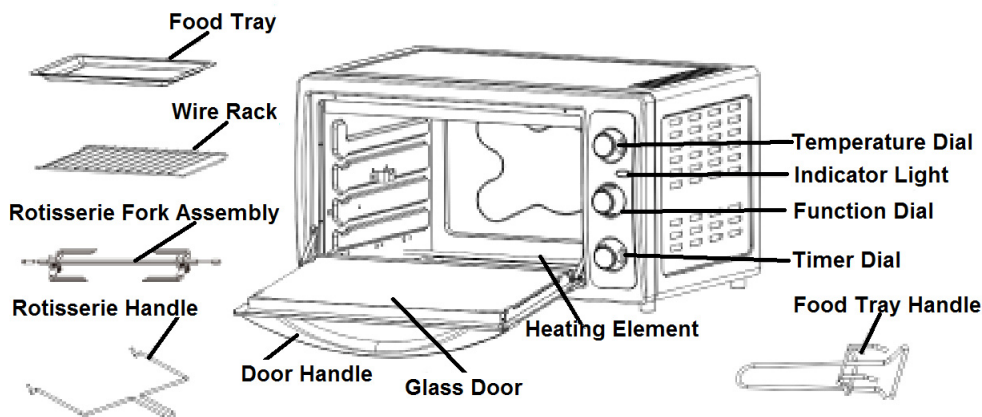

## Temperature Dial

 
Select between 100C and 230C

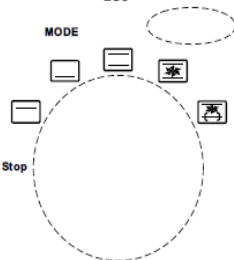

## Indicator Light

## Function Dial

 Select type of cooking required

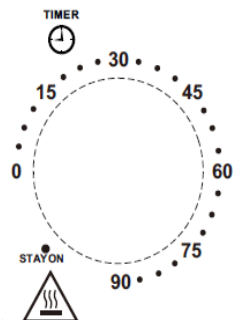

## Timer Dial

Counterclockwise turn to "Stay On", (on without Timer).  
Clockwise turn to choose desired time (up to 90 minutes)

Before using for the first time, the appliance must be cleaned. To clean the appliance:

1. Wash the accessories and oven interior with warm soapy water and a damp cloth.
2. Place the wire rack and baking tray inside the oven.
3. Close the door.
4. Set the Temperature dial to the highest setting and set the Timer knob to '5 minutes'.
5. When the minutes are over turn Off the appliance and disconnect from the power supply.

Allow to cool. The appliance is now ready to use.

### Selecting Function

Your Caterlite Oven has 5 individual function settings Depending on requirement turn Function dial to required setting as listed below -



Upper element heating



Lower element heating



Upper and lower element heating



Upper and lower element heating plus fan



Upper element heating plus fan and rotisserie

## Setting the Timer

The Timer knob also acts as the Power switch. When the Timer is set to '0' the power is Off.

1. Connect the appliance to the mains power supply.
2. Set the Timer knob to the required time.
3. The appliance will begin to heat up to the set temperature (see 'Setting the Temperature') and the Power Indicator light comes on.

**Note: The Time can be adjusted during cooking if required. Simply adjust the setting as required using the Timer knob.**

4. When the Timer reaches '0' an audible alarm sounds and the appliance turns Off.

## Stay On Function

For continuous cooking turn Timer dial counter clockwise to STAY ON position

## Setting the Temperature

 
 
1. Turn the Temperature Control Knob to the required temperature (90°C-230°C).
2. The Temperature Indicator light comes on.

**Note: When the Oven reaches the set temperature the Temperature Indicator light turns off.**

## Rotisserie Function

Your Caterlite oven has a rotisserie function. Whole Chicken or meat joints up to a maximum weight of 1.5kgs can be roasted using the rotisserie function.

1. Ensure the baking tray is positioned on the lowest rack to catch dripping fat (line tray with foil to make cleaning easier)
2. Only use the rotisserie function for poultry and meat joints that have been trussed with butchers twine.
3. Insert the rotisserie spit through the centre of the Chicken / joint of meat and secure using the 2 rotisserie skewers (inserting the skewers at different angles will help secure the food as it rotates)
4. Insert the spit into the rotisserie spit holders on located centrally on either side of the oven cavity.
5. Set the function dial to Rotisserie
6. Set the Temperature Dial as required
7. Set the timer as required or alternatively set timer dial to STAY ON setting.
8. Use Rotisserie handle to remove food when cooked

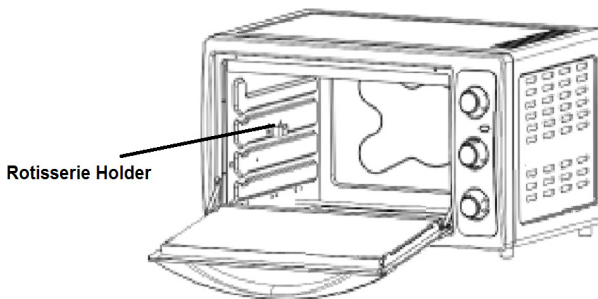

# Cleaning, Care & Maintenance

- Always turn Off the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning.
- A Caterlite dealer or qualified technician should carry out repairs if required.

# Troubleshooting

If your Caterlite appliance develops a fault, please check the following table before making a call to the Helpline.

<b>Fault</b>	<b>Probable Cause</b>	<b>Action</b>
The appliance is not working	The appliance is not switched on	Check the appliance is plugged in correctly and switched on
	Plug and lead are damaged	Call Caterlite agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call Caterlite agent or qualified technician
Appliance does not reach set temperature	Faulty thermostat	Call Caterlite agent or qualified technician
	Faulty element	Call Caterlite agent or qualified technician
Appliance heats up but indicator light does not come on	Bulb has expired	Call Caterlite agent or qualified technician
Power indicator light comes on but appliance does not heat up	Faulty element	Call Caterlite agent or qualified technician
	Faulty thermostat	Call Caterlite agent or qualified technician
	Thermostat set incorrectly	Check thermostat
Appliance slow to heat up	Cooking surface not clean	Clean cooking surface
	Faulty element	Call Caterlite agent or qualified technician

## Technical Specifications

Model	Voltage	Power	Current	Temperature Range (°C)	Capacity (litres)	Dimensions h x w x d (mm)	Weight (kg)
CM272	230V 50Hz	2000W	8.7A	90 - 230	36	315 x 423 x 560	10

## Electrical Wiring

This appliance is supplied with a 3 pin, moulded, BS1363 plug and lead, with a 13 amp fuse as standard. The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

## Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



Caterlite parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Caterlite products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Caterlite.

Every effort is made to ensure all details are correct at the time of going to press, however, Caterlite reserve the right to change specifications without notice.

# DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità • Declaración de conformidad • Declaração de conformidade

**Equipment Type** • Uitrustingstype • Type d'équipement • Gerätetyp •

Tipo di apparecchiatura • Tipo de equipo • Tipo de equipamento

**Model** • Modèle • Modell • Modello • Modelo • Malli

**Application of Council Directives(s)**

Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo • Aplicação de directiva(s) do Conselho

**Producer Name** • Naam fabrikant • Nom du producteur • Name des Herstellers • Nome del produttore • Nombre del fabricante • Nome do fabricante

**Producer Address** • Adres fabrikant • Adresse du producteur • Anschrift des Herstellers • Indirizzo del produttore • Dirección del fabricante • Endereço do fabricante

<b>Mini Oven</b>
<b>CM272</b>
<b>RoHS Directive 2011/65/EU</b>
<b>Ecodesign Directive ErP 2009/125/EC</b>
<b>EMC Directive 2014/30/EU</b>
<b>LVD Directive 2014/35/EU</b>
<b>LVD Directive 2006/95/EC</b>
<b>Caterlite</b>
<b>Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom</b>

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Eu, o abaixo-assinado, declaro que o equipamento anteriormente especificado está em conformidade com a(s) anterior(es) Directiva(s) e Norma(s)

**Date** • Data • Date • Datum • Data • Fecha • Data


**Signature** • Handtekening • Signature • Unterschrift

Firma • Firma • Assinatura

**Full Name** • Volledige naam • Nom et prénom • Vollständiger Name •

Nome completo • Nombre completo • Nome por extenso

**Position** • Functie • Fonction • Position • Qualifica • Posición • Função
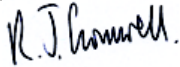
<b>23/02/16</b>

<b>Richard Cromwell</b>
<b>Commercial Director</b>



## NOTES





# **Caterlite**

**Caterlite\_Cm272\_UK\_V2**