

G3840 SERIES FRYERS

INSTALLATION, SERVICING and USER INSTRUCTIONS

CAUTION: Read the instructions before using the appliance



These appliances must be installed and serviced by a qualified person as stipulated by the Gas Safety (Installation & Use) Regulations.

IMPORTANT

The installer must ensure that the installation of the appliance is in conformity with these instructions and National Regulations in force at the time of installation. Particular attention **MUST** be paid to –

Gas safety (Installation & Use) regulations	I.E.E. Regulations for Electrical Installations
Health & Safety at work, etc Act	Electricity at Work Regulations
Local and National Building Regulations	Fire precaution Act

Detailed recommendations are contained in **DW172 Institute of Gas Engineers** published documents: **IGE/ UP/ 1, IGE/ UP/ 2, IGE/ UP/ 4, BS6173 and BS5440**

These appliances have been UKCA/CE-marked based on compliance with the Gas Appliance Regulations/Product Safety and Metrology Regulations, Electrical and Electromagnetic Compatibility (EMC) Regulations/Directives for the Countries, Gas Types and Pressures as stated on the data plate.

WARNING - TO PREVENT SHOCKS, ALL APPLIANCES, GAS OR ELECTRIC, MUST BE EARTHED.

On completion of the installation, these instructions should be left with the Engineer-in-Charge for reference during servicing. Further to this, the user instructions should be handed over to the user, having had a demonstration of the operation and cleaning of the appliance.

PREVENTATIVE MAINTENANCE CONTRACT

To obtain maximum performance from this unit regular servicing of the appliance should be undertaken to ensure correct operation, it is functioning as intended, and safe to use. We recommend servicing in accordance with SFG20 Maintenance Schedules and as a minimum, after 2,500 hours of use, or annually, whichever comes first and that a maintenance contract be arranged with an appointed service contact. Visits may then be made at agreed intervals to carry out adjustments and repairs.

We recommend that the oil level sensor (**UK Patent Serial No. GB2584184**) in the G3840X/G3840FX/G3840XP/G3840FXP models should be serviced annually.



WEEE Directive Registration No. WEE/DC0059TT/PRO

At end of unit life, dispose of appliance and any replacement parts in a safe manner, via a licenced waste handler. Units are designed to be dismantled easily and recycling of all material is encouraged whenever practicable.

This equipment is **ONLY FOR PROFESSIONAL USE** and shall be operated by **QUALIFIED** persons. It is the responsibility of the supervisor or equivalent to ensure that users wear **SUITABLE PROTECTIVE CLOTHING** and to draw attention to the fact that some parts will, by necessity, become **VERY HOT** and will cause burns if touched accidentally.

Falcon Foodservice Equipment

Wallace View, Hillfoots Road, Stirling, FK9 5PY, Scotland
Phone: 01786 455200

T100806 Ref.19

CONTENTS

1.0	SAFETY GUIDANCE	5
1.1	GENERAL SAFETY.....	5
1.2	INSTALLATION SAFETY	6
1.3	ELECTRICAL SAFETY.....	6
1.4	GAS SAFETY	7
1.5	FIRE SAFETY.....	7
1.6	MAINTENANCE SAFETY	8
2.0	SYMBOLS & LABELS.....	10
3.0	TRANSPORT & INSTALLATION	11
3.1	TRANSPORT & POSITIONING.....	11
3.2	MODEL NUMBERS, NETT WEIGHTS & DIMENSIONS.....	12
3.3	SITING.....	13
3.4	ANTI-TIPPING KIT	13
3.5	CLEARANCES.....	13
3.6	VENTILATION.....	13
3.7	GAS SUPPLY (All Models)	14
3.8	ELECTRICAL SUPPLY.....	15
3.9	TOTAL RATED HEAT INPUTS.....	15
3.10	INJECTOR SIZES	15
4.0	ASSEMBLY and COMMISSIONING	16
4.1	ASSEMBLY	16
4.2	CONNECTION TO A GAS SUPPLY	16
4.3	CONNECTION TO AN ELECTRICAL SUPPLY	16
4.4	STARTING UP.....	16
4.5	PRE-COMMISSIONING CHECK.....	20
4.6	TEMPERATURE LIMIT THERMOSTAT.....	21
4.7	OIL LEVEL SENSOR (G3840X/G3840XP/G3840FX/G3840FXP only).....	21
4.8	INSTRUCTION TO USER	21
5.0	SERVICING, MAINTENANCE AND CONVERSION.....	21
5.1	GAS CONVERSION (Natural to propane or propane to natural)	22
5.2	INTEGRAL COMPONENTS.....	23
5.3	ACCESS PROCEDURES.....	23
5.4	GAS CONTROL VALVE.....	23
5.5	PILOT/IGNITER/SENSOR ASSEMBLY	23
5.6	BURNER.....	23
5.7	BURNER RESET SWITCH, ON/OFF SWITCH and FILTRATION PUMP SWITCH.....	24
5.8	BURNER LOCK OUT NEON.....	24
5.9	OPERATING THERMOSTAT (Thermistor) PROBE.....	24

5.10	TEMPERATURE CONTROLLERS	24
5.11	MAINS ON and HEAT DEMAND NEONS.....	24
5.12	DRAIN VALVE.....	25
5.13	FILTRATION PUMP	25
5.14	IGNITION CONTROL BOX.....	25
5.15	TEMPERATURE LIMIT THERMOSTAT.....	25
5.16	OIL LEVEL SENSOR (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7).....	25
5.17	TOP UP AND LOW OIL LEVEL LEDS (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7).....	26
5.18	OIL LEVEL SENSOR EVALUATION UNIT (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7).....	26
5.19	RELAYS & RELAY BASES (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7).....	26
5.20	POWER SUPPLY UNIT (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7).....	26
6.0	SPARES	27
7.0	CRITICAL DIMENSIONS.....	28
8.0	OPERATING INSTRUCTIONS	29
8.1	APPLIANCE CONTROLS.....	31
8.2	LIGHTING and OPERATION Safety Precautions.....	31
8.3	PROGRAMMING THE G3840P/G3840XP/G3840FP/G3840FXP.....	33
7.3.1	Programming temperature set point and temperature scale	33
7.3.2	Programming a Product Cycle Time and Action Alarm.....	33
9.0	CHANGING/FILTERING THE OIL.....	34
9.1	STARTING THE FILTRATION PROCESS	35
9.2	G3840F/G3840FX/G3840FP/G3840FXP MODEL.....	35
10.0	CLEANING and MAINTENANCE	36
10.1	CLEANING THE APPLIANCE.....	36
11.0	PREPARATION OF SOLID FATS / SHORTENING.....	38
12.0	COOKING HINTS	39
13.0	WIRING DIAGRAMS.....	40
13.1	G3840 WIRING DIAGRAM	40
13.2	G3840X WIRING DIAGRAM	41
13.3	G3840P WIRING DIAGRAM	42
13.4	G3840XP WIRING DIAGRAM	43
13.5	G3840F WIRING DIAGRAM	44
13.6	G3840FP WIRING DIAGRAM	45
13.7	G3840FX WIRING DIAGRAM	46
13.8	G3840FXP WIRING DIAGRAM	47
13.9	G3840 CIRCUIT DIAGRAM	48
13.10	G3840X CIRCUIT DIAGRAM.....	49
13.11	G3840P CIRCUIT DIAGRAM.....	50
13.12	G3840XP CIRCUIT DIAGRAM.....	51
13.13	G3840F CIRCUIT DIAGRAM	52
13.14	G3840FP CIRCUIT DIAGRAM	53

13.15 G3840FX CIRCUIT DIAGRAM54
13.16 G3840FXP CIRCUIT DIAGRAM55

1.0 SAFETY GUIDANCE

1.1 GENERAL SAFETY



1.1.1 These instructions are only valid if the country code appears on the appliance. If the code does not appear on the appliance, refer to the technical instructions for adapting the appliance to the conditions for use in that country.

1.1.2 These appliances have been UKCA/CE-marked based on compliance with the Gas Appliance Regulations/Product Safety and Metrology Regulations, Electrical and Electromagnetic Compatibility (EMC) Regulations/Directives for the Countries, Gas Types and Pressures as stated on the data plate.



1.1.3 This equipment is for professional use only and must be used by qualified persons.

1.1.4 Never leave this appliance unsupervised when in use and always turn products off at the end of service.



1.1.5 The installer must instruct the responsible person(s) of the correct operation and maintenance of the appliance.

1.1.6 Check that no damage has occurred to the appliance or supply cord during transit. If damage has occurred, do not use this appliance.



1.1.7 If fitted to the appliance, ensure the supply cord is routed free from the appliance to avoid damage.

1.1.8 **Min-Level Mark: Medium** should never be allowed to drop below the mark. Should this occur, top up immediately or switch off the fryer.



1.1.9 Suitable Protective clothing must be worn when topping up whilst the fryer is hot.

1.1.10 To prevent surge boiling. **DO NOT EXCEED** recommended loads or charge pan with over-wet food items. **NEVER** leave a working appliance unattended.

1.1.11 If the appliance is fitted with an oil bucket, take care when removing as oil bucket is heavy when full.

1.1.12 **Training and Competence:** To help ensure the safe use of this appliance there is a requirement for you to provide whatever information, instruction, training, and supervision as is necessary to ensure, so far as is reasonably practicable, the health and safety of all users.

1.1.13 For further help and information on training and competence we refer you to the Health & Safety Executive website; www.hse.gov.uk document ref: health and safety training INDG345. International customers should default to the health and safety guidelines provided by your government body.

1.1.14 **Risk Assessment:** As part of managing the health and safety of your business you must control any risks identified in your commercial kitchen. To do this you need to think about what might cause harm to people and decide whether you are taking reasonable steps to prevent that harm. This is known as risk assessment. It is important to consider the environment around the product as well as the product itself. For example, oil or food spills will present a significant risk so users so the need to immediately clean up such spills must be reflected in staff training.



- 1.1.15 Record the training that you provide and support it by providing safe system of work (SSOW) documents that set out procedures to be followed for potentially hazardous tasks.
- 1.1.16 For further help and information on risk assessments we would refer you to you the Health and Safety Executive website; www.hse.gov.uk document ref: risk assessment INDG163. International customers should default to the health and safety guidelines provided by your government body.

1.2 INSTALLATION SAFETY



- 1.2.1 Installation must meet national or local regulations. Attention must be paid to: safety (installation & use) regulations, health and safety at work act, local and national building regulations, fire precautions act.
- 1.2.2 The installer must instruct the responsible person(s) of the correct operation and maintenance of the appliance.
- 1.2.3 On gas appliances, only competent persons are allowed to service or convert the appliance to another gas type.
- 1.2.4 Put a documented system in place for periodic inspections, testing and maintenance of our gas/ electrical appliances. Check that the fixed electrical installation has been inspected and tested by a competent electrical contractor (e.g. NICEIC-approved or ECA member) as prescribed in BS7671, within the last 5 years.

1.3 ELECTRICAL SAFETY



- 1.3.1 To prevent shocks, this appliance must be earthed.
- 1.3.2 This unit is fitted with an equipotential connection at the rear on the base.
- 1.3.3 Before attempting any maintenance, isolate the appliance at the mains switch and take steps to ensure that it is not inadvertently switched on.
- 1.3.4 We recommend, Supplementary electrical protection with the use of a type A residual current device (RCD).
- 1.3.5 Fixed wiring appliances incorporate a locally situated switch disconnector.
- 1.3.6 to connect to, which is easily accessible for switching off and safe isolation purposes. The switch disconnector must meet the specification requirements of IEC 60947.

1.4 GAS SAFETY



1.4.1 Gas appliances must have a stop cock fitted in the supply pipe work. The user must be familiar with the location and operation of this device in order to turn off the supply of gas in the event of an emergency.

1.4.2 Before Inspection, Servicing or Conversion, Turn Off Gas at isolator.

1.5 FIRE SAFETY



Fryers can present various hazards in the catering environment if not correctly used, operated, and maintained. Hazards including fire, burns from hot oil, contact with hot surfaces, fumes from boiling cleaning chemicals, eye injuries from splashes and slips from oil spillages.

Operator Competency and Training

1.5.1 Ensure you are trained in the safe and proper use of the fryer and know how to turn it off and switch the power or gas off at the mains.

1.5.2 Ensure you are familiar with the kitchen fire safety procedures and the location and proper use of correct fire safety equipment.

Fryer Safety Equipment

1.5.3 Provide an appropriate BS compliant fire blanket, and an adequate number of fire extinguishers that comply with BS EN 3 (parts 1-6) and carry a BAFE or LPCB approval mark. At least one must be appropriate for use on electrical fires, and one for deep-fat fryers (Class F).

Fryer Suppression System

1.5.4 We recommend kitchen equipment and extraction systems are protected with a fire suppression system. Check your insurance as this may also be a condition of your policy.

1.5.5 Protect cooking and extraction equipment (including any associated extraction ductwork and hoods inside the building) by having an extinguishing system installed, in line with (or the equivalent of) [LPS 1223](#). The system should include a local alarm, automatic activation by a detection system and manual activation – located a safe distance away from the cooking equipment, preferably by a fire escape route door.

Operational Fryer Safety

1.5.6 Do not leave the fryer unattended when powered on or when it is in use.

1.5.7 Always switch the fryer off and replace the pan cover/ lid when not in use.

Cleaning

1.5.8 Ensure fryers are regularly cleaned serviced and maintained by a qualified and competent service provider, and there is enough room around the appliance to do so.

- 1.5.9 Ensure that the appliance, surrounding work area and extraction system are regularly cleaned, (at least weekly) to avoid the build-up of fats oils and greases that could present a fire risk. A deep clean should be undertaken at least every 6 months by a specialist contractor.

Oil Safety

- 1.5.10 Do not operate the fryer with no or low oil levels.

- 1.5.11 Solid Fat (e.g. Beef Tallow) must be melted using the fat melt mode in order to avoid fire caused by burning of the fat and/or overheating. We do not recommend using Solid Fat if the fryer control does not have a Fat Melt Cycle.

- 1.5.12 Regularly change your cooking oil. Use colour charts to check on oil quality.



- 1.5.13 If you see the cooking oil or fat smoking, switch the fryer off, allow to cool, drain oil, clean and dry fryer pan thoroughly and replace with fresh oil. If the clean fryer oil smokes when heated, switch off immediately and contact service engineer. Do not switch fryer back on.

- 1.5.14 Never add water to the fryer medium at any time.

Gas and Electrical Isolation Points

- 1.5.15 Ensure any separate gas shut off switches and electric switches provided for cooking equipment and/or extractor fans are accessible and clearly labelled.

Care and Maintenance of Thermal and Operational Safety Devices

- 1.5.16 Your fryer is fitted with a thermal safety device. This will stop heating of medium if it becomes overheated. This appliance will always fail safe so long as there is no damage to the thermal safety device.



- 1.5.17 Failure to clean and check the safety and operational thermostats can impact the performance of the appliance and increase the risk of an appliance fire.

- 1.5.18 Damage to the thermostat sensors or their capillaries can increase the risk of overheating or fire.

- 1.5.19 Do not operate the fryer if the safety devices located within the fryer pan appear to be dislodged or damaged.

1.6 MAINTENANCE SAFETY



- 1.6.1 Unless otherwise stated, parts which have been protected by the manufacturer must not be adjusted by the installer or end user.

- 1.6.2 We recommend that the oil level sensor (UK Patent Serial No. GB2584184) in X or FX models should be serviced annually.



- 1.6.3 Before any cleaning is undertaken, isolate appliance from mains power supply at isolator switch.

- 1.6.4 Suitable protective clothing must be worn when cleaning this appliance.



- 1.6.5 If filtration is fitted, never pump water through the filtration pump at any time! Water and hot oil are an explosive mixture.

- 1.6.6 **Oil must be allowed to cool to a safe temperature before draining. Do not overfill the oil bucket. All spills onto the product and on the floor should be cleaned up immediately**
- 1.6.7 **The appliance must not be cleaned with a jet of water or steam cleaned. Do not use acid or halogen-based (e.g., chlorine) descaling liquids, flammable liquids, cleaning aids or cleaning powders.**
- 1.6.8 **Failure due to lack of proper cleaning is not covered by warranty.**
- 1.6.9 **Particular attention must be paid to cleaning the Thermostat bulb & Capillaries.**



- 1.6.10 **Take care when cleaning not to dislodge or damage thermostat sensors mounted on the base and side of the pan.**



- 1.6.11 **If the thermostats or capillaries are damaged, then do not turn the appliance on and contact Falcon or you approved service provider to undertake the necessary repairs.**



- 1.6.12 **In the extraordinary event that the oil level sensor does come into contact with fire the probe should be replaced.**

- 1.6.13 **To obtain maximum performance from this unit regular servicing of the appliance should be undertaken to ensure correct operation, it is functioning as intended, and safe to use. We recommend servicing in accordance with SFG20 Maintenance Schedules and as a minimum, after 2,500 hours of use, or annually, whichever comes first and that a maintenance contract be arranged with an appointed service contact. Visits may then be made at agreed intervals to carry out adjustments and repairs.**



- 1.6.14 **During Servicing of the appliance, where applicable, please ensure seals are checked. If the integrity of the seal is compromised, it must be replaced**

2.0 SYMBOLS & LABELS



SCREWDRIVER



SPANNER




COOKING OIL



GREASE



WARNING

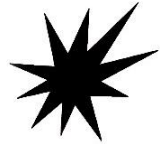


SPARK IGNITION



FLAME



VIEWPORT

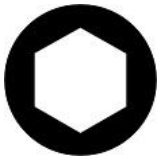

ALLEN KEY



IGNITER



C SPANNER



REMOVE DEVICE



PLUG REMOVER



WARNING
ELECTRICITY



READ MANUAL

3.0 TRANSPORT & INSTALLATION

ELECTRICAL SAFETY AND ADVICE REGARDING SUPPLEMENTARY ELECTRICAL PROTECTION

Commercial kitchens and foodservice areas are environments where electrical appliances may be located close to liquids, or operate in and around damp conditions or where restricted movement for installation and service is evident.

The installation and periodic inspection of the appliance should only be undertaken by a qualified, skilled and competent electrician; and connected to the correct power supply suitable for the load as stipulated by the appliance data label.

The electrical installation and connections should meet the necessary requirements to the local electrical wiring regulations and any electrical safety guidelines.

We recommend: -

- Supplementary electrical protection with the use of a type A residual current device (RCD)
- Fixed wiring appliances incorporate a locally situated switch disconnector to connect to, which is easily accessible for switching off and safe isolation purposes. The switch disconnector must meet the specification requirements of IEC 60947.

Your attention is drawn to:-

BS 7671:2018–Guidance Note 8 - 8.13 : Other locations of increased risk

It is recognized that there may be locations of increased risk of electric shock other than those specifically addressed in Part 7 of BS 7671. Examples of such locations could include laundries where there are washing and drying machines in close proximity and water is present, and commercial kitchens with stainless steel units, where once again, water is present.

Where because of the perception of additional risks being likely, the installation designer decides that an installation or location warrants further protective measures, the options available include:

- Automatic Disconnection of Supply (ADS) by means of a residual current device having a residual operating current not exceeding 30mA;
- Supplementary protective equipotential bonding; and
- Reduction of maximum fault clearance time.

The provision of RCDs and supplementary bonding must be specified by the host organization's appointed installation designer or electrical contractor and installed by a suitably qualified and competent electrician so as to comply with Regulations 419.2 and 544.2

3.1 TRANSPORT & POSITIONING

General warnings for transport:

- a) Observe the Maximum load and stacking limits.
- b) Follow the indications shown on the packaging, any instructions on the equipment, including those on the points where forklift trucks cannot be used.
- c) Danger of crushing during transportation due to the weight of the appliance.
- d) Hands and fingers may be crushed.
- e) Wear suitable protective clothing when transporting.
- f) Danger of overturning during transporting

- g) Danger of crushing due to the appliance overturning on persons.
- h) Take care over the centre of gravity of the appliance.
- i) Take great care to ensure that the appliance does not overturn during transportation, lifting and after installation.

Take care over the width and height of accesses during transportation.

Take care not to damage the appliance due to narrow doorways: doorways less than 80cm wide, remove any handles etc.

Check that all the parts of the appliance are intact and have not been damaged during transportation. If damaged due to transportation, inform the specialised reseller/ haulier immediately.

To position the appliance, it is recommended to use the mount offered by the manufacturer, should you want to do things differently, it is necessary to take account of the weight of the appliance.

Before permanently fixing the appliance in position, the Water, Electrical and Gas Connections must be made. (See relative sections).

Once the appliance is installed, the electrical power cable must be protected, and never stretched or tugged.

Remove all packaging materials and peel away the protective plastic film from all external surfaces of the appliance.



UNLESS OTHERWISE STATED, PARTS WHICH HAVE BEEN PROTECTED BY THE MANUFACTURER ARE NOT TO BE ADJUSTED BY THE INSTALLER.

Please ensure that any plastic coatings are removed prior to use. Before operation, pan requires to be thoroughly cleaned and dried.

Discolouration of heated parts is caused by factory testing to ensure a satisfactory unit. It does not affect quality or performance.

3.2 MODEL NUMBERS, NETT WEIGHTS & DIMENSIONS.

Fryer Model	Width (mm)	Depth (mm)	Height (mm)	Weight (kg)	Fryer Model	Width (mm)	Depth (mm)	Height (mm)	Weight (kg)
G3840	400	770	1090	83	G3840P	400	770	1090	83
G3840X	400	770	1090	85	G3840XP	400	770	1090	85
G3840F	400	770	1090	94	G3840FP	400	770	1090	94
G3840FX	400	770	1090	96	G3840FXP	400	770	1090	96

Pan oil capacity:

18 litres cold, good quality oil (to –MIN- mark)

3.3 SITING

Each unit must be installed on a firm level floor in a well- lit draught free position. The fryer should be installed in a freestanding position to prevent any possibility of sideways tipping under force. The means of restraint may be the manner of installation, such as connection to a battery of appliances or installing the fryer in an alcove, or by separate means, such as adequate ties.

3.4 ANTI-TIPPING KIT

An anti-tipping mechanism is supplied with unit. If these are to be fitted, the brackets must be fitted to locate the fryer in the correct position relative to any walls as detailed below. Fixing holes are provided in the fryer base to accommodate the bracket. The bracket should be fitted as detailed in Figure 1. Secure to fixing point and secure bracket to floor after alignment with anti-tipping device attached to the fryer. Adjust to slide below floor bracket.

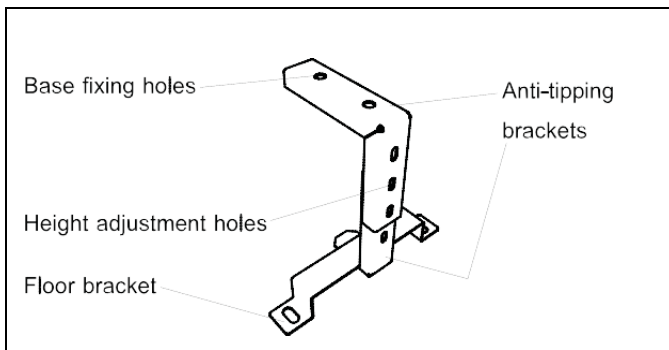


Figure 1 - Anti-tipping Bracket

3.5 CLEARANCES

The unit requires a clearance of at least 150mm all-round between unit and any walls. **The unit must only be installed next to non-combustible walls.** A minimum vertical clearance of 750mm should be allowed between top edge of flue outlet and any overlying combustible surface.



Important

If fryer is to be installed with other appliances then the instructions for every model should be consulted to determine the necessary clearance to any wall or overlying surface.

Some appliances require greater clearance distances than others. The largest clearance will therefore determine overall distance for a complete suite of adjoining appliances.

3.6 VENTILATION

This appliance **MUST** be installed with sufficient ventilation to prevent the occurrence of unacceptable concentrations of substances harmful to health in the room in which they are installed. Installer must consult any additional local / national regulations.

The fresh air requirement for this appliance at a rate of 2M³/hour per kW is 44 M³ is as follows:

COMBUSTION AIR REQUIREMENTS			
APPLIANCE	VENTILATION ATE	APPLIANCE	VENTILATION ATE
G3840	44 m ³ /h	G3840P	44 m ³ /h
G3840X	44 m ³ /h	G3840XP	44 m ³ /h
G3840F	44 m ³ /h	G3840FP	44 m ³ /h
G3840FX	44 m ³ /h	G3840FXP	44 m ³ /h

3.7 GAS SUPPLY (All Models)

To be checked at installation, gas conversion or repair.

Note: Governor setting may be checked at burner manifold without the need to remove the right-hand side panel.

To adjust appliance pressure;

The SIT gas valve, situated at rear RH side of unit and accessible by removing RH side, has an in-built governor.

The supply pressure should be checked at valve inlet test nipple using a manometer.

Burner pressure should be set at test nipple on burner manifold using a manometer.

Checking / Setting values are indicated below (for either natural or propane gas).


This is achieved by removing brass dust screw from valve governor and adjusting governor accordingly using an approved VDE insulated screwdriver - clockwise rotation increases pressure. (see illustration) insulated



Warning: To avoid risk of electric shock, all adjustments to the governor should be made with the appliance switched off and unplugged.

Note: Propane (I_{3P}) appliances require governor to be adjusted clockwise to *maximum* adjustment.

	Supply pressure	Burner pressure at manifold
Natural Gas (I _{2H})	20mbar	14mbar
Propane Gas (I _{3P})	37mbar	34mbar

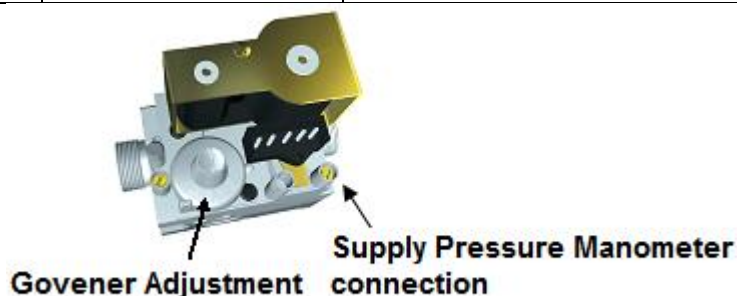

The incoming service must be of sufficient size to supply full rate without excessive pressure drop. A gas meter is connected to service pipe by gas supplier. Any existing meter should be checked preferably by gas supplier to ensure that it is adequate to deal with rate of gas supply required.

Installation pipe work should be fitted in accordance with IGE/UP/2. The size of pipes from meter to unit must not be less than that of appliance inlet connection. A 3/4" BSP inlet connection is fitted to unit.

An isolating valve must be located close to the appliance to facilitate shut down during an emergency or routine servicing. The cock must be easily accessible to the user. The installation must be tested for gas soundness as stated in IGE/UP/1.

Domestic type, flexible rubber tube connections must NOT be used with this appliance.

Only tube complying with BS669 Part 2, Specification for corrugated metallic flexible hoses for catering appliances, shall be used. These hoses must be no longer than 1.5 metres and should be periodically checked / replaced as necessary.

3.8 ELECTRICAL SUPPLY

The unit is equipped with a 3-core flexible cord with standard 3 pin plug fitted with a 13A fuse. A regular 13A socket outlet can be used.

If supply is provided through a distribution fuse box, it must be via a fuse with a maximum rating of 13A.

In the event of mains cable being replaced, any new cable should comply with 60245 IEC 57 designation. (H05RN - F)




THE APPLIANCE MUST BE EARTH BONDED.

Check that no damage has occurred to the appliance, power cable and plug face during transit. If damage has occurred, do not use the appliance.

Ensure that the mains power cable is routed free from the appliance to avoid damage.

We recommend supplementary electrical protection with the use of a type A residual current device (RCD). Periodical testing, repair and fixing wiring connection should only be undertaken by a skilled and competent electrician.

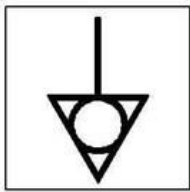

This appliance is also provided with a terminal for connection of an external equipotential conductor. This terminal is in effective electrical contact with all fixed exposed metal parts of the appliance and shall allow the connection of a conductor having a normal cross-sectional area of up to 10mm². It is located on the rear panel and is identified by the following symbol and must only be used for bonding purposes.

G3840 / G3840X / G3840F / G3840FX / G3840P / G3840XP / G3840FP / G3840FXP	Rated Voltage	Rated Current
	230V~	3.55amps

3.9 TOTAL RATED HEAT INPUTS

Appliance	KW	BTU/Hr (gross)	Pilot
G3840 / G3840X / G3840F / G3840FX / G3840P / G3840XP / G3840FP / G3840FXP Nat (I _{2H})	21.5kW	80,700 btu/h	*0.29kw *Ignites with main burners
G3840 / G3840X / G3840F / G3840FX / G3840P / G3840XP / G3840FP / G3840FXP Prop (I _{3P})	22kW	82,600 btu/h	*0.26kw *Ignites with main burners

3.10 INJECTOR SIZES

Appliance	Main Burners	Pilot
G3840 / G3840X / G3840F / G3840FX / G3840P / G3840XP / G3840FP / G3840FXP Nat (I _{2H})	2 x Ø2.6mm	Polidoro G31.2
G3840 / G3840X / G3840F / G3840FX / G3840P / G3840XP / G3840FP / G3840FXP Prop (I _{3P})	2 x Ø1.7mm	Polidoro G25

4.0 ASSEMBLY and COMMISSIONING

The gas supply piping and connection to appliance must be installed in accordance with the local regulations in conjunction with those listed on the cover of this manual.

4.1 ASSEMBLY

- a) Unpack appliance.
- b) Unpack fryer baskets and accessories.
- c) Place basket support grid and basket in pan.
- d) Level appliance and fit all service protection kits.
(Anti-tilt kit is supplied).

4.2 CONNECTION TO A GAS SUPPLY

Connect gas supply and test for gas soundness.



Caution

Ensure that pan contains an acceptable level of liquid before igniting burner.

Due to the presence of mains electrics, integral pipe work should be checked for gas soundness using an appropriate gas leak detector.



Caution

Installation engineers should note that for first time connection of appliance to supply, it is essential that inlet gas supply to fryer is completely purged of air prior to first lighting attempt. Otherwise, since this is a light pilot first every time system, it will take a significant number of tries to light due to the small amount of air bled from pipe by pilot at each attempt. This should not initially be treated as a fault.

Please note that several attempts will still be required after air purge for first time lighting. This is due to the capacity of valve and governor.

4.3 CONNECTION TO AN ELECTRICAL SUPPLY

Ensure flexible cable does not come into contact with any hot parts. The fuse rating should be 13A.

Colour coding of power supply cables is as follows:

Live - **Brown**, Neutral - **Blue**, Earth - **Green/Yellow**

4.4 STARTING UP

G3840/F

If you are in the fat melting cycle and loading solid fat for the first time, always remove basket support plate as detailed in Section 9. Solid fat should be in direct contact with fryer pan.

Refer to Section 9.

G3840X/G3840FX

It is recommended that fat is pre-melted before pouring it in to the G3840X/G3840FX for the first time.

G3840/F Fryer Control Panel (See Figure 2)

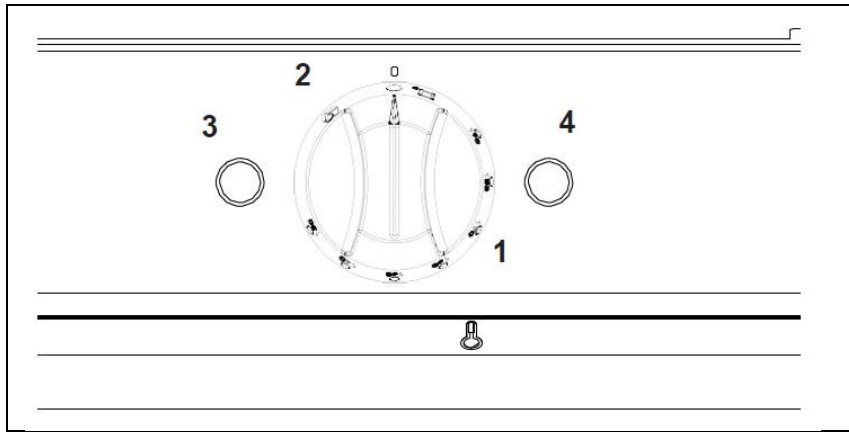


Figure 2 – G3840 Control panel

- 1. ON/OFF and Temperature Control Knob**
Temperature Selection (140 - 190°C). (Unit is off when control is in position indicated).
- 2. Fat Melt Position**
Feature for slow pulsed heating of solid fats.
- 3. Power on indicator.**
- 4. Heat Demand Indicator**
Illuminates when thermostat demands heat, i.e. oil temperature is more than 5°C below temperature setting. Extinguishes when desired temperature is reached.

G3840X/G3840FX Fryer Control Panel (See Figure 3)

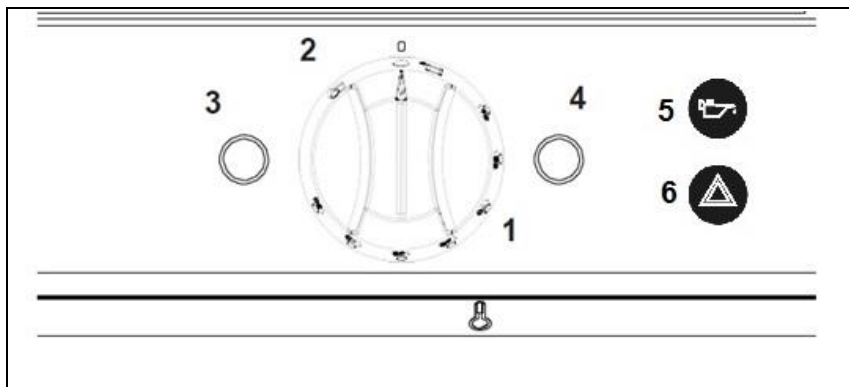


Figure 3 – G3840X/G3840FX Control panel

- 1. ON/OFF and Temperature Control Knob**
Temperature Selection (130 - 190°C). (Unit is off when control is in position indicated).
- 2. Fat Melt Position**
Feature for slow pulsed heating of solid fats.
G3840X/G3840FX Only – For first use it is recommended that the solid fat is pre-melted before being added to the fry pot.
- 3. Power on indicator (Red).**
Illuminates when the appliance is switched on.

4. **Heat Demand Indicator (Amber).**

Illuminates when thermostat demands heat, i.e. oil temperature is more than 5°C below temperature setting. Extinguishes when desired temperature is reached.

5. **Top up oil indicator (Orange, Oil can symbol)**

Indicates when the oil level has dropped at least 40mm below the MIN mark.

6. **Low oil level indicator (Red Flashing, Hazard triangle).**

Indicates when the oil has dropped to the same level as the temperature probe (approximately 80mm below MIN mark).

G3840P/FP Fryer Control Panel (See Figure 4)

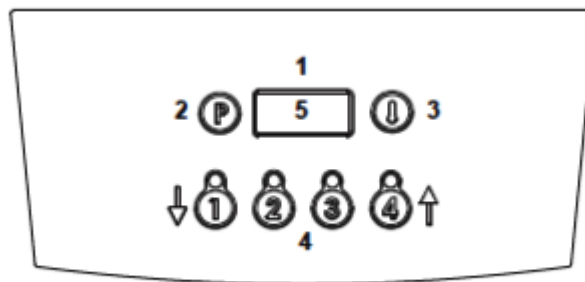


Figure 4 – G3840P/FP Control Panel

1. Four Digit LED Display

Displays Set temp, Actual temp, cook time remaining and also used for programming purposes.

2. Program Button

Used to enter timer programme mode (*to change each of the 4 pre-set timer select channels - See Section 6*).

3. Temperature Button

Used to view Actual/Set temperature and to enter Set temperature mode (*See Section 6*).

4. Timer Keys (1 – 4)

Used to start/cancel pre-set cook times. Buttons 1 & 4 also used to change times or temperatures when in either set mode (*See Section 6*).

5. Heat demand LED indicator

A small green dot after the first digit. Illuminates when thermostat demands heat, i.e., oil is more than 2°C below programmed set temperature. Will extinguish when desired setting is reached.

G3840XP/FXP Fryer Control Panel (See Figure 5)

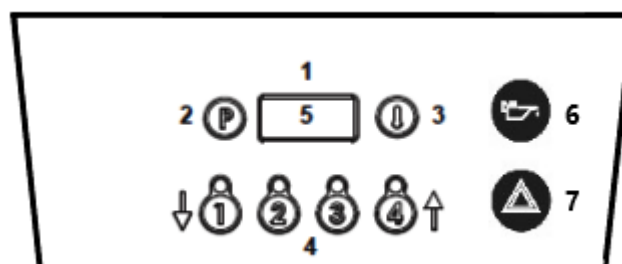


Figure 5 – G3840XP/G3840FXP Control Panel

1. Four Digit LED Display
Displays Set temp, Actual temp, cook time remaining and used for programming purposes.
2. Program Button
Used to enter timer programme mode (*to change each of the 4 pre-set timer select channels - See Section 6*).
3. Temperature Button
Used to view Actual/Set temperature and to enter Set temperature mode (*See Section 6*).
4. Timer Keys (1 – 4)
Used to start/cancel pre-set cook times. Buttons 1 & 4 also used to change times or temperatures when in either set mode (*See Section 6*).
5. Heat demand LED indicator
A small green dot after the first digit. Illuminates when thermostat demands heat, i.e., oil is more than 2°C below programmed set temperature. Will extinguish when desired setting is reached.
6. Top up oil indicator (Orange, Oil can symbol)
Indicates when the oil level has dropped at least 40mm below the MIN mark.
7. Low oil level indicator (Red Flashing, Hazard triangle).
Indicates when the oil has dropped to the same level as the temperature probe (approximately 80mm below MIN mark).

Additional Controls - (See Figure 6)

The following additional controls are located behind cabinet door.

1. **Burner and Temperature Controls ON/OFF Switch**
Cuts power to burner and temperature controls.
2. **Burner Lockout Indicator**
Indicates flame failure.

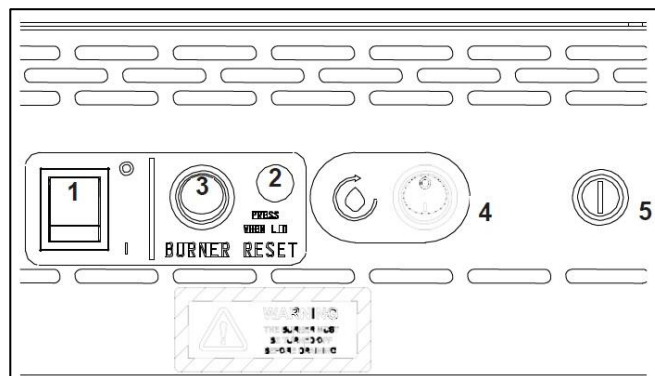


Figure 6 – Additional controls

3. **Burner Lock-Out Reset Switch**
Resets burner for further lighting attempts when burner lockout indicator is illuminated.
4. **Filtration Pump Switch ('F' models only)**
Energises filtration pump when burner switch is in OFF(O) position.
5. **Temperature Safety Limiter Reset Button**
Remove cap, green push button.

G3840, G3840X, G3840F & G3840FX Controller Diagnostic Indicators

(On printed circuit board of controller, behind control panel)

Green LED 'ON' indicates heat demand. Green LED 'OFF' indicates no heat demand.

Red LED flashes if temperature probe is either short or open circuited.

Red LED is permanently 'ON' to indicate system is OK. Set point is +/-7°C of mid-set point.

4.5 PRE-COMMISSIONING CHECK

- a) Clean out pan thoroughly using hot water and detergent. Rinse out and dry thoroughly.
Note - For further detail with regard to cleaning, refer to Section 8.
- b) Ensure drain valve is closed. Fill pan with clean cooking oil to -MIN- (*maximum cold fill mark*) indicated on fryplate (*See Figure 9*).
Note: MAX refers to maximum **hot** fill mark.
- c) With gas supply still shut off, turn on electrical mains supply.
- d) Open door and press temperature limit thermostat reset button (*green*), refer to Section 2.6. Set burner switch to Position 'I' (*ON position*).
- e) Turn control knob to desired temperature (*140°C*) and heat demand indicator will illuminate (*Figure 2, item 4*).
- f) Fryer ignition sequence will commence and spark may be heard before unit locks out.
Note: Ignition system will attempt a second sequence, 14 seconds after completion of first try if no flame is detected during first attempt. (*Unit will only lock out after 2nd attempt*).
- g) Neon next to burner switch inside door will illuminate to indicate lockout has occurred and that no burner flame is present. Additional controls - Item 2 on Figure 6.
- h) Turn gas supply on.
- i) Press lockout reset switch. See Figure 6 (*Lock out indicator will extinguish*).
- j) Burner will ignite and heat indicator will illuminate to signify that burner is on. If lockout should occur, repeat Steps 9 -10 until air is bled from supply and burner lights.
- k) When burner flame is established, check for gas leaks. Care should be taken because mains voltage is present. Isolate after gas checks.

Checking Controller Operation

To check operation of controls, refer to Using the Controller - Section 6.2.3.

Checking Oil Filtration Pump

To check operation of oil filtration pump, refer to Section 7.



Important

After installation, the responsible technician should check for gas leaks and ensure the appliance is operating safely and satisfactorily before handing over to the user.

4.6 TEMPERATURE LIMIT THERMOSTAT

The unit is equipped with an additional temperature limit thermostat, independent of main controller. In the case of operating thermostat failure, allowing oil temperature to rise above predetermined legislation safe zone (230°C), limit device will activate and cut power to controller. It will also stop the flow of gas to burner, refer to Figure 6.

- a) Turn burner and temperature controls ON/OFF knob to OFF position.
- b) Allow oil to cool below 180°C
- c) Remove cap and push green button to reset limit thermostat, refer to Figure 6.
- d) Turn burner and temperature controls ON/OFF knob to ON position.
- e) Re-select temperature.
- f) If limit thermostat reactivates carry out fault finding on temperature control circuitry.

4.7 OIL LEVEL SENSOR (G3840X/G3840XP/G3840FX/G3840FXP only)

The unit is equipped with an additional Oil Level Sensor (Patent No. **GB2584184**).

When the oil level drops to at least 40mm below the MIN mark, then the Top Up Oil LED will indicate (Orange oil can symbol) warning the user that the oil level has dropped considerably.

When the oil level drops to approximately 80mm below the MIN mark (same level as temperature probe), the Low Oil Level LED will indicate (Flashing red hazard triangle) warning the user that the oil level is unacceptable.

At this point the fryer will stop the flow of gas to the burner and put the fryer into lockout. The fryer cannot be taken out of lockout until the fry pot has been filled with oil to an acceptable level.

4.8 INSTRUCTION TO USER

After installing and commissioning appliance, please hand Instructions to user or purchaser and ensure that the person(s) responsible understands the instructions to correctly operate and clean unit in a safe manner.

Emphasis should be given to safe operation and use of drain valve and oil bucket. Oil bucket should not be overfilled to allow safe movement. Oil should be allowed to cool before any manual handling.



Note: The oil container may be heavy. Drain small amounts at a time if necessary, before lifting container. Manual handling regulations should be observed.

5.0 SERVICING, MAINTENANCE AND CONVERSION

SERVICE INFORMATION

This unit carries an extensive mainland UK warranty. The warranty is in addition to and does not change your statutory or legal rights.

The warranty policy can be found on our website which details the conditions of the warranty and the exclusions.



Service calls to equipment under warranty will be carried out in accordance with the conditions of sale.

Warranty calls can be made between 8:30 am and 5:00 pm weekdays only.

To ensure your warranty enquiry is handled as efficiently as possible, ensure you have the following appliance information prior to calling us:

1. Model number – found on data plate
2. Serial number – found on data plate
3. Brief description of the issue

To contact Falcon for a warranty issue dial (UK only) 01786 455 200 and select Warranty Issues from the menu.



BEFORE ATTEMPTING ANY SERVICING, TURN OFF GAS SHUTOFF VALVE AND ELECTRICAL SUPPLY. TAKE STEPS TO ENSURE THAT THESE CANNOT BE INADVERTENTLY TURNED ON.

MAINTENANCE CHECK

Regular servicing of the appliance should be undertaken to ensure correct operation, it is functioning as intended, and safe to use. We recommend servicing after 2,500 hours of use, or annually, whichever comes first.



Any maintenance schedule should be carried out in accordance with SFG20 Maintenance Schedules. Should any issues with the integrity of the components be identified these should be replaced. If the appliance is not considered safe the unit should be removed from service and the responsible person advised why the unit is not safe to use and what remedial action is needed. Contents of the maintenance schedule should be agreed with the maintenance provider.

AFTER ANY MAINTENANCE TASK, CHECK UNIT TO ENSURE THAT IT PERFORMS SAFELY AND CORRECTLY AS DESCRIBED IN SECTION 2.5.

ALWAYS CHECK FOR GAS LEAKS.

Moving the fryer with hot or cold oil in fry pot can be dangerous. Scalding could occur. Spilled oil or fat on the kitchen floor could cause slipping accidents and any such deposit should be cleaned up straight away.

To prevent any such hazard, caution must be observed when moving fryer.

5.1 GAS CONVERSION (Natural to propane or propane to natural)

This model is suitable for field conversion. A kit with fitting instructions can be supplied upon request.

Appliance is converted from one gas category to another as follows:

1. Change Main Jets.
2. Change Pilot injector.
3. Adjust Governor.
4. Change Data badge.

5.2 INTEGRAL COMPONENTS

Check and service the following parts regularly:

1. Oil ingress to electrical components.
2. Flue for any blockages.
3. Visual inspection of components and fryer pan.
4. Temperatures limit thermostat calibration.

5.3 ACCESS PROCEDURES

- a) Ensure appliance electrical and gas supply has been shut off and cannot be accidentally turned back on.
- b) Allow oil to cool before any operation that requires pan to be drained.
- c) Only use parts specified by the manufacturer.
- d) All components replaced MUST be fully checked after fitting to ensure safe operation.
- e) A full pre-commissioning check as detailed in Section 2.5 should be carried out.

5.4 GAS CONTROL VALVE

- a) Remove RH side panel (*fixing behind control panel, hex bolt below panel at front and 3 fixings at rear*) and rear control compartment cover (*3 fixings*).
- b) Unplug valve control wires.
- c) Split pipe work from both sides of valve.
- d) Disconnect pilot pipe.
- e) Remove screws holding valve to bracket.
- f) Replace in reverse order. Check system for gas leaks. Reset burner pressure as detailed in Section 1.4.

5.5 PILOT/IGNITER/SENSOR ASSEMBLY

- a) Open door and remove oil bucket splash cover by means of two screws on each leg at front and slide out through door.
- b) Disconnect electrode and ignition wires.
- c) Using a screwdriver and 8mm spanner, remove pilot assembly and bracket from burner.
- d) Drop assembly and remove pilot pipe.
- e) Replace parts in reverse order. Ensure that a good earth connection has been made.

5.6 BURNER

Remove pilot/igniter/sensor assembly as Section 3.5.

- a) Remove drain handle.
- b) Split incoming gas connection to manifold.
- c) Undo two middle mounting bolts and remove two front burner retention bolts and slide burner forward until it clears rear retention mountings. Carefully drop burner.
- d) Re-connect in reverse order.
- e) Gas leak check manifold and pilot gas connections.

5.7 BURNER RESET SWITCH, ON/OFF SWITCH and FILTRATION PUMP SWITCH

- a) Remove control panel by undoing fixings at top and bottom of control panel and unplug control panel.
- b) Undo 2 fixings and hinge down switch mounting panel.
- c) Remove electrical connections from switch. Remove switch by squeezing side fixings and pushing it through aperture.
- d) Replace part in reverse order.

5.8 BURNER LOCK OUT NEON

- a) Remove control panel by undoing fixings at top and bottom of panel. Unplug panel.
- b) Undo 2 fixings and hinge down switch mounting panel.
- c) Remove electrical connections and remove neon retention nut.
- d) Replace part in reverse order.
- a) Carefully replace in reverse order.

5.9 OPERATING THERMOSTAT (Thermistor) PROBE

- a) Ensure fry pot is empty. Refer to Section 8.
- b) Remove control panel by undoing fixings at top and bottom of control panel and gently pull panel forward. (Control panel may be rested on hob, with wires still attached).
- c) Remove probe and temperature limit (safety) thermostat protective cover (*ensuring insulation is removed intact*).
- d) Remove probe protective cage inside pan.
- e) From inside controls compartment, remove hex securing nut and remove probe.
- f) Disconnect wire connector plug.
- g) Replace in reverse order.

5.10 TEMPERATURE CONTROLLERS

- a) Remove control panel by undoing fixings at top and bottom of control panel and gently pull control panel forwards. (Control panel may be rested on hob, with wires still attached)
- b) Disconnect wires connected to board from loom.
G3840/G3840X/G3840F/G3840FX only
- c) Remove Control Knob.
- d) From front of control panel, remove fixings to enable controller to be removed.
G3840P/G3840XP/G3840FP/G3840FXP only
- e) Disconnect electrics and remove fixings to enable controller to be removed.
- f) Carefully replace in reverse order.

5.11 MAINS ON and HEAT DEMAND NEONS

- a) Remove control panel by undoing fixings at top and bottom of control panel. Disconnect control panel.
- b) Remove electrical connections from neon. Undo neon retention nut.
- c) Carefully replace in reverse order.

5.12 DRAIN VALVE

- a) Remove burner as detailed in Section 3.6
- b) Ensure fry pot is empty. Refer to Section 8.
- c) Remove nut from handle and lift handle off.
- d) Remove front panel fasteners.
- e) Disconnect wiring, noting all connections.
- f) Remove front panel to access drain valve.
- g) Undo drain pipe. Use appropriate spanner to remove drain valve.
- h) Replace in reverse order and check for oil leaks.

5.13 FILTRATION PUMP

- a) Remove back panel and flexi-hose at filtration pump.
- b) Disconnect electrical coupling plug and connections from start.
- c) Remove nuts from pump mounting bolts (*accessed through fryer door at rear of oil bucket compartment*) and lift pump clear.
- d) Disconnect pump from bracket.
- e) Replace in reverse order.



Remember to check for oil leaks before replacing panels.

5.14 IGNITION CONTROL BOX

- a) Remove rear compartment cover.
- b) Unplug valve and control plugs. Remove ignition, detector, and earth connections.
- c) Undo three fixings (*one at rear, two at front*).
- d) Remove ignition control box.
- e) Replace in reverse order & test.

5.15 TEMPERATURE LIMIT THERMOSTAT

- a) Open control panel.
- b) Remove probe and safety thermostat protective cover (*ensuring insulation is removed intact*).
- c) Remove phial and probe protective cage inside pan.
- d) Undo two phial bracket retention nuts and remove thermostat phial from bracket.
- e) Undo safety thermostat capillary nut. Using a thin screwdriver - insert into boss from inside pan - carefully tap capillary sealing washers through to control compartment.
- f) Remove thermostat.
- g) Disconnect thermostat wires.
- h) Carefully replace in reverse order. Check for oil leaks and that thermostat calibration is within specification.

5.16 OIL LEVEL SENSOR (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7)

- a) Ensure fry pot is empty
- b) Remove back panel.

- c) Disconnect oil sensor wires (blue & red BNC connectors) from the evaluation unit.
- d) Remove LH side panel.
- e) Remove control panel.
- f) Carefully feed oil sensor wires (blue & red BNC connectors) back through hole in the side of the electrics box behind the control panel.
- g) Undo oil level sensor retaining nuts
- h) Lift oil level sensor guard.
- i) Pull the oil level sensor forward into the pan and carefully feed the wires through the boss.
- j) Carefully replace in reverse order.



Note

In the extraordinary event that the oil level sensor does come into contact with fire. The probe should be replaced.

5.17 TOP UP AND LOW OIL LEVEL LEDS (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7)

- a) Remove control panel by undoing fixings at top and bottom of control panel. Disconnect control panel.
- b) Remove electrical connections from LEDs. Undo LED retention nut.
- c) Carefully replace in reverse order.

5.18 OIL LEVEL SENSOR EVALUATION UNIT (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7)

- a) Remove back panel.
- b) Disconnect oil sensor wires (blue & red BNC connectors) from the evaluation unit.
- c) Disconnect evaluation unit wires (brown, blue, white & black) from relays and power supply unit.
- d) Disconnect earth lead from chassis.
- e) Remove evaluation unit from bracket by undoing fixings.
- f) Replace in reverse order.

5.19 RELAYS & RELAY BASES (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7)

- a) Remove back panel.
- b) Disconnect wiring.
- c) Remove relay and base from DIN rail.
- d) Replace in reverse order.

5.20 POWER SUPPLY UNIT (G3840X/G3840FX/G3840XP/G3840FXP only, Figure 7)

- a) Remove back panel.
- b) Disconnect wiring.
- c) Remove power supply unit from the DIN rail.
- d) Replace in reverse order.

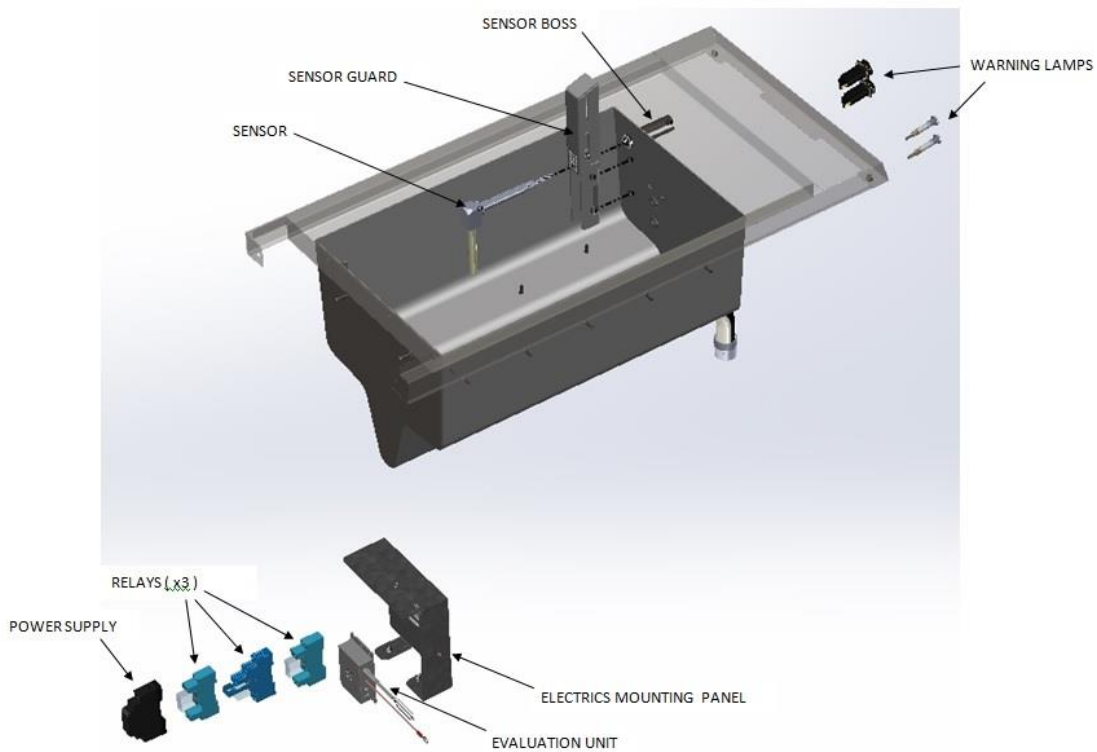


Figure 7 – Oil level sensor circuit components

6.0 SPARES

When ordering spare parts, always quote appliance type and serial number. This information will be found on unit data plate, located inside the fryer door on LH leg support face.

Operating Controller	Operating Controller Knob
Operating Controller Temperature Sensing Probe	Safety Thermostat
Gas Valve	Gas Ignition Box
Burner Assembly	Pilot Assembly
Flame Sensor Assembly	Electrode Assembly
Drain Valve	Ballast Resistor
Fuse - 2Amp	Fuse - 5Amp
Red Neon	Amber Neon
Adjustable Leg	Castor
Chip Basket	Pan Crumb Catcher
Oil Pump	Oil Pump Timer
Oil Filter Basket	Fine Mesh Oil Filter
Oil level sensor	Evaluation unit
24V power supply	24VDC Relay
230VAC Relay	

7.0 CRITICAL DIMENSIONS


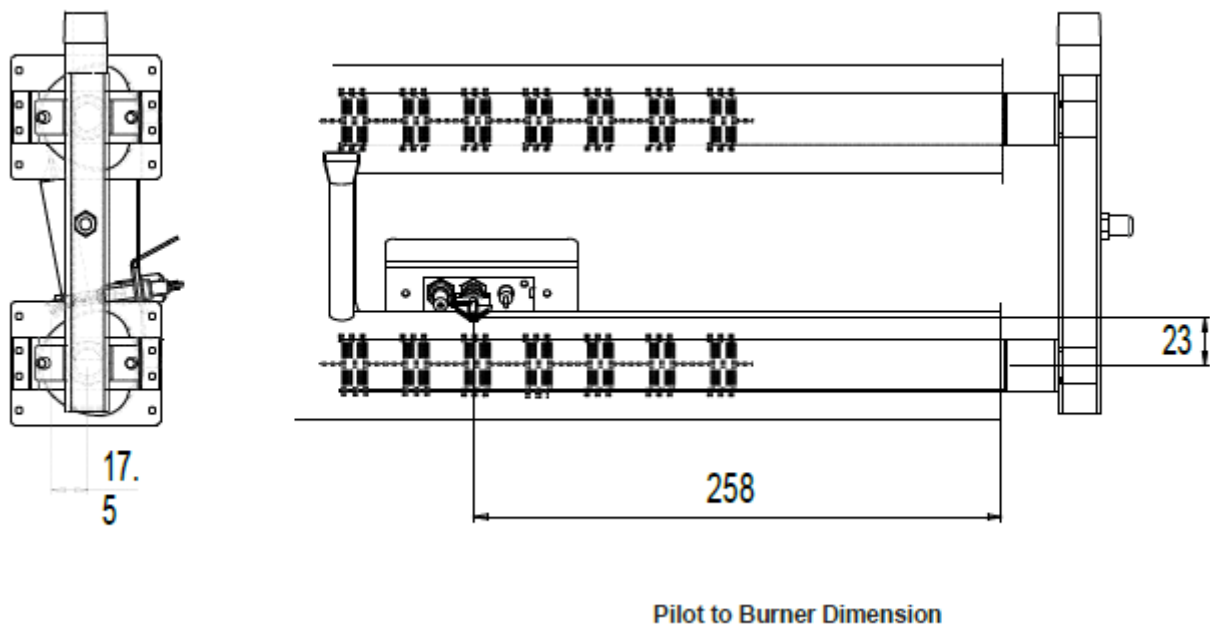


Figure 8 – Critical dimensions

8.0 OPERATING INSTRUCTIONS

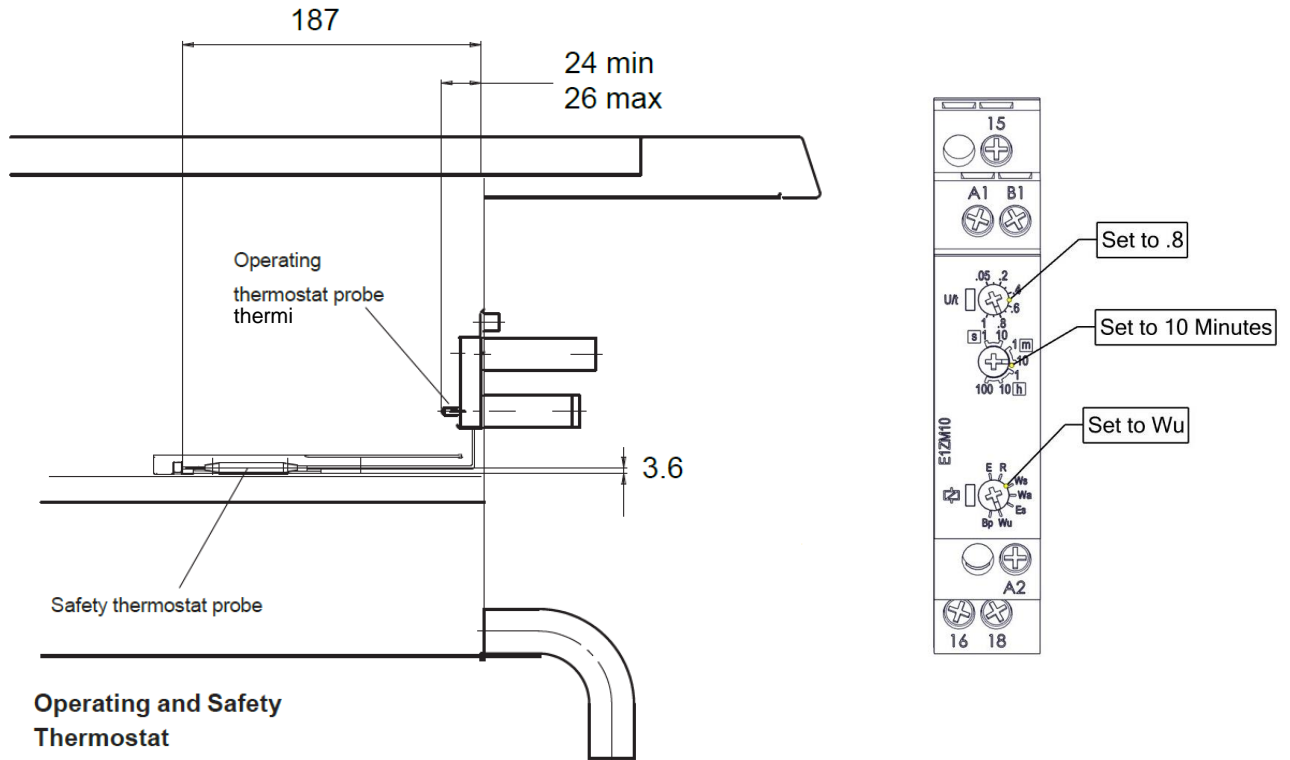

PARTICULAR ATTENTION MUST BE PAID TO CLEANING THE THERMOSTAT PROBE AND CAPILLARIES.

ENSURE FOOD DEBRIS DOES NOT BUILD UP, WHICH COULD DETRIMENTALLY AFFECT THE PERFORMANCE AND SAFETY OF THE APPLIANCE.



PARTS WHICH HAVE BEEN PROTECTED BY THE MANUFACTURER ARE NOT TO BE ADJUSTED BY THE USER.

The fryers are of single pan type.

G3840 - Manual control model.

G3840X - Manual control model with oil level sensor.

G3840F - Manual control model with inbuilt filtration.

G3840FX – Manual control model with inbuilt filtration and oil level sensor.

G3840P – Programmable control model.

G3840XP - Programmable control model with oil level sensor.

G3840FP - Programmable control model with inbuilt filtration.

G3840FXP – Programmable control model with inbuilt filtration and oil level sensor.

Note: The oil container may be heavy. Drain small amounts at a time if necessary, before lifting container. Manual handling regulations should be observed.

Warning: Appliances on Castors



When the fryer is supplied with castors it should be connected to supply piping by means of a connector for moveable appliances. In addition, a restraining chain should be connected between appliance and wall. Ensure this restraint is re-connected when unit is returned to original position.

Moving the fryer with hot or cold oil in fry pot can be dangerous to the operator. Scalding could occur. Spilled oil or fat on the kitchen floor could cause slipping accidents and any such deposit should be cleaned up straight away.

To prevent any such hazard, DO NOT move fryer until all liquid has been drained from fry pot.

USE OF OILS/SHORTENING/SOLIDS (COOKING MEDIUM)

As these are highly flammable when in their liquid state, caution should always be taken when using cooking medium.

Recommendation

PPE (*Personal Protective Equipment*) should be used when cleaning or handling medium within this fryer.

Medium should not be overheated as this will increase the risk of fire.

Note: Fryer is fitted with a thermal safety device. This will stop heating of medium if it becomes overheated. This appliance will always fail safe.



Warning

This appliance should only be used with both oil temperature controlling Thermostat and Thermal limit (safety) Thermostat in working condition.

NEVER leave a working unit unattended. Medium must always be maintained within fry pot.

Cold Medium - when filling with cold medium (see Figure 9), DO NOT FILL MEDIUM PAST -MIN- LEVEL MARK (Maximum cold fill mark) also, for Solid Medium - See Section 9.

-MIN- Level Mark: Medium should NEVER be allowed to drop below this mark. Should this occur, top up immediately or switch fryer OFF.

Hot Medium and Topping Up Medium DO NOT FILL MEDIUM PAST -MAX- LEVEL MARK (Maximum Hot Fill Mark). (See Figure 9).

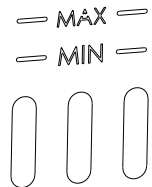


Figure 9



CAUTION

SUITABLE PROTECTIVE CLOTHING MUST BE WORN when topping up whilst fat in fryer is hot.

Medium and Foodstuffs

Food will increase in volume during cooking - follow these rules:



DO NOT ADD WATER TO FRYING MEDIUM AT ANY TIME!

Do not introduce excessively wet food into the fryer.

WARNING

No attempt must be made to operate this appliance during a power supply failure.

Please ensure that any plastic coated items are removed prior to use. Before operation, pan requires to be thoroughly cleaned and dried.

Discolouration of heated parts is caused by factory testing to ensure unit is satisfactory. It will not affect quality or performance.

All Models

A neon indicator is incorporated to indicate flame failure when illuminated.

An electronic thermostat with temperature probe is fitted to automatically control oil temperature. The burner is protected by an electronic flame sensor device.

An additional temperature limit thermostat is also fitted, independent of main thermostat.

Operating thermostat failure could allow oil temperature to exceed legislated maximum safe temperature (230°C). In such a condition, limit thermostat will activate and cut power to controller. It will also stop flow of gas to burner.

For location of re-set limit thermostat, refer to Figure 4

To Reset Temperature Limit (Safety) Thermostat

- a) Turn burner and temperature controls to OFF position.
- b) Allow oil to cool below 180°C.
- c) Unscrew black protective cap from limit (safety) thermostat reset button, button is located behind cabinet door at upper RH below fascia panel.
- d) Push green button to reset limit (safety) thermostat.
- e) Turn burner and temperature controls to ON position.
- f) Reselect temperature.
- g) If limit thermostat reactivates, an investigation to determine the reason must be carried out by a qualified technician.

8.1 APPLIANCE CONTROLS

Refer to Sections 2.4.1 and 2.4.2 for controls layout and description.

8.2 LIGHTING and OPERATION Safety Precautions

The installer must fit a gas shut-off valve in the gas pipe that supplies the unit.

IF A SMELL OF GAS IS EVIDENT:

- a) TURN OFF GAS SUPPLY.
- b) VENTILATE AREA.
- c) CALL YOUR LOCAL GAS SUPPLIER.

NEVER USE AN OPEN FLAME TO CHECK FOR GAS LEAKS!

Lighting Instructions

Remove lid (*if fitted*) and baskets and set these aside. Ensure fryer pan is clean and completely dry. Ensure also that drain valve is closed. Pour clean, cold oil to -MIN- level mark on fryplate.

- a) Ensure pan is filled with solids / shortening to indicated level and gas supply is established.
- b) Ensure burner switch is in off position (O).
- c) Press burner switch to on position (I).
- d) Refer to individual unit info below.
- e) **G3840/G3840X/G3840F/G3840FX only**- Turn knob to select temperature. (If solid fat is used, select FMC fat melt cycle).



Warning

Do not select any setting other than FMC when using solid fats as this will trip Temperature Limit (safety) thermostat or in a worst case scenario, ignite the liquefied oils.

- f) **G3840P/G3840XP/G3840FP/G3840FXP only** – Unit has temperature range of between 130°C to 190 °C (See Section 7.3 for instructions on how to change set temperature).

Refer to individual unit info below.

- g) **G3840/G3840X/G3840F/G3840FX only** - Heat demand indicator will illuminate.
- h) **G3840P/G3840XP/G3840FP/G3840FXP only** – Display will illuminate with figures **8888** for 2 secs, CTT for 2 secs, **r 02** for 2 secs and **SEt dEg** flashes.

Press ↓1 or 4↑ on control panel, last temperature will display, if temperature acceptable press <temperature button 3> to activate. If temperature is not acceptable see section 6.3 for

instructions on how to change to set temp. When temperature is set **L.ouu** displays and the heat demand LED indicator will illuminate (small dot between **L** and **o**)

- i) If burner fails to light, lock-out indicator will illuminate. **Note:** Ignition system will attempt a second ignition sequence - 14 seconds after completion of first try if no flame is detected. (Unit will lock out after 2nd attempt).
- j) Reset burner by pressing burner lock-out reset switch.
- k) If burner repeatedly fails to light, switch off electrical and gas supplies. Call service engineer.

Fryer maximum basket loading

Pre-blanched chilled fries– **2 x 1.5kg baskets.**

Frozen fries – **2 x 1.2kg baskets.**

Using the Controller

G3840/G3840X/G3840F/G3840FX only – Manually operated.

When unit is lit as detailed in Section 7.2 lighting, operate as follows:-

- a) If using solid fat, turn control knob clockwise to select FMC (*Fat Melt Cycle*).
- b) When solid/shortening has liquefied, select desired temperature.

The user **MUST** be familiar with the location and operation of this valve for shutting off gas in event of an emergency.



Warning

Do not select any setting other than FMC when using solid fats as this will trip the Temperature Limit (safety) thermostat or in a worst case scenario, ignite the liquefied oils.

- c) Fat or oil temperature will then be governed by controller to desired set temperature, selected by user on the control knob.

G3840P/G3840XP/G3840FP/G3840FXP Models only – Programmable

When unit is lit as detailed in Section 7.2. lighting instructions above, fryer may be operated as follows: -

NOTES:

- 1) There is NO solid fat melt pulsing cycle (*FMC*) incorporated in this controller.
- 2) The oil temperature will be governed by the controller at a temperature range between 130 °C and 190°C. See Section 7.3 for instructions on how to set temperature.
- 3) When actual temperature is within 10°C of set point the display reads **redy**. See Section 7.3 for instructions on how to display actual or set temperature).

Before carrying out any cooking operations, controller should be set up for particular application of use (*e.g. up to four timer programmes, product frying temperature, °C/°F*). This can all be carried out using the following guide in Section 7.3.

Operating the Controller:

- a) **Start a timing cycle:** Press any product key (*1 to 4*) to start a timing cycle. If key is programmed, the correct time will be displayed and will immediately start to count down and LED above key will flash. DONE will display when cook cycle has ended and alarm will sound. If DONE is displayed immediately and alarm sounds, the key has not been programmed See Section 7.3 for programming details.
- b) **Stop a timing cycle:** Press and hold an active product key for 3 seconds or press key 3 times within 2 seconds.

- c) Respond to a **DONE** alarm: Cancel signal by pressing same product key used to start timing cycle.
- d) **Multiple timing cycles:** If a second or third product key is pressed while the first is still active, the shortest time remaining key is displayed and only the LED above key flashes, the other(s) remain constantly lit. Once shortest time programme ends and is accepted, next shortest is displayed and LED above flashes. **Note:** All product key timers will count down although not displayed until shorter one ends.
- e) **Action Alarms** (*Shake, etc.*): If control is programmed for action alarm, they will signal at a preset time during the timing cycle. The signal, a dual-rhythm beeping, will last 5 seconds and then self-cancel. The display will flash action alarm time and then will continue counting towards **0:00**.
- f) **Viewing Actual/Set Temperatures:** Pressing the temperature key once will display "**AXXX**" where XXX is actual temperature in degrees (*C or F depending on how controller is programmed – See Section 7.3*). Pressing the temperature key again within 5 seconds will display "**PXXX**" where XXX is the programmed Set temperature of the controller in degrees (*C or F depending on how controller is programmed – See Section 7.3*). If temperature key is not pressed again within 5 seconds, display returns to idle or timer mode.

8.3 PROGRAMMING THE G3840P/G3840XP/G3840FP/G3840FXP

Display Descriptions

Set dEg – Indicates that the operator needs to set a temperature.

L.ouu - Controller is in operating mode. Actual vat temperature is more than 10° below programmed vat temperature. The dot "." After the first digit ('L') indicates that the

rEdy - Controller is in operating mode. Actual vat temperature is within proper cooking temperature range. Vat is ready to begin a cook cycle.

HI - Controller is in operating mode. Actual vat temperature is more than 30° above highest programmed vat temperature.

Prob - Control probe is either open circuited or short circuited. Display will be accompanied by an audible alarm if shorted. Check or replace probe.

2:30 - The control is in operating mode and a cook cycle is in progress.

Done - The control is in operating mode and a cook cycle has been completed. Display will be accompanied by a pulsing audible alarm.

7.3.1 Programming temperature set point and temperature scale

- a) Press and hold temperature key for 3 seconds. "**Prog**" will be displayed. Then press **DOWN** (key 1) or **UP** (key 4) key.
- b) The display will show either "°C" or "°F" (*degrees celsius or degrees fahrenheit*). Once desired temperature scale is displayed, press temperature key to accept/enter.
- c) Display will now alternate between "**Sett**" and "**XXXZ**" (*where X denotes temperature and Z indicates temperature scale*).
- d) Adjust temperature (range 130-190°C) using **DOWN** (key 1) and **UP** (key 4) keys. The longer key is pressed, the faster temperature scrolls.
- e) When desired temperature has been reached, press temperature key to accept/enter.
- f) To exit temperature programming, press temperature key again.

7.3.2 Programming a Product Cycle Time and Action Alarm

- a) Press and hold P key for 3 seconds. "**Prog**" will display. **Note:** Programming mode will exit automatically if no keys are pressed within 2 minutes.

- b) Select a product key to program (1 to 4). The display will alternate between “**ti-z**” and “**X:XX**” where **z** is the number of the key pressed and **X:XX** is the set time in minutes and seconds.
- c) Adjust the time up or down using the **DOWN** (key 1) and the **UP** (key 4) keys. The longer key is held, the faster time will scroll.
- d) Once desired time is reached, press **P** key to accept/enter.
- e) The display will now alternate between “**PrEz**” and “**X:XX**” where **z** is the number of key presses and **X:XX** is action alarm time in minutes and seconds.
NOTE: The time entered here is the time action is required before the end of the total cycle time entered above. If NO Action time is required, leave at “**0:00**”. Adjust time as c) above.
- f) Once desired time is reached, press **P** key to accept/enter.
- g) “**Prog**” will again be displayed and another product key can be selected for programming. Repeat above steps. When no more keys are required to be programmed and “**Prog**” is displayed, press **P** key to exit programming mode and return to idle mode.

9.0 CHANGING/FILTERING THE OIL



Warning

After filtering, wait 30 seconds before removing bucket. It is dangerous to use shortening that is too old. This medium has a reduced flash point temperature and is prone to surge boiling.



Caution

To prevent surge boiling, DO NOT EXCEED recommended loads or charge the pan with over-wet food items. NEVER LEAVE a working appliance unattended



Warning

When draining solids/shortening, ensure oil has time to strain through strainer basket. Heavily unfiltered oil may overflow.

Note

This could cause pump to block over a period of time and is considered as misuse of equipment.



Warning

When pumping solids/shortening back into fryer pan. Ensure all trace of solids/shortening is emptied from receptacle (*bucket*). If oil is not emptied on a regular basis or if oil is left in the receptacle, it may solidify and overflow or spill on to the kitchen floor to create a hazard.

9.1 STARTING THE FILTRATION PROCESS

Turn burner & temperature controls ON/OFF switch to OFF position and allow oil to cool below 170°C (or if cold, heat to minimum temperature of 60°C). Open cabinet door and pull filter bucket forward.

1. Ensure bucket is clean and emptied of all solids / shortening and debris. Refer to Section 8 for details of how to clean filter components.
2. Ensure that strainer and microfilter are clean.
3. With strainer and microfilter in position, slide bucket back on to runner cradle and back into fryer.



Please Note – Warning

Do not handle filter components or adjacent surfaces when pump is operating. Components will remain hot for a period after filter. Allow cooling. Use of PPE's is recommended.

Note: Burner and temperature controls ON/OFF switch must be in OFF position before operation of filter pump can begin.

9.2 G3840F/G3840FX/G3840FP/G3840FXP MODEL

1. Press filtration pump switch to turn on pump.

Note: With cabinet door open, switch is located at RH side of drain valve (Refer to Figure 6).

2. Turn drain handle clockwise.
3. Pan will drain through strainer basket and microfilter into bucket and will pump back into pan.
4. Clear debris from pan and empty crumb catcher.
5. If pan drain becomes blocked, clear using drain prod.
6. When debris has been removed from pan, turn valve handle anti-clockwise to close valve.
7. Allow pan to refill.
8. If any solid / shortening remains, repeat Step 1.



Warning

Ensure all shortening has been pumped from receptacle before topping up pan.

9. Switch filtration pump off.
10. Top up fryer if required.



Please Note

If the G3840X/G3840FX/G3840XP/G3840FXP pan has not been refilled until at least the low oil level indication (Flashing hazard triangle) clears, then the fryer will not light.

10.0 CLEANING and MAINTENANCE



BEFORE ANY CLEANING IS UNDERTAKEN, ISOLATE APPLIANCE FROM MAINS POWER SUPPLY AT ISOLATOR SWITCH.

SUITABLE PROTECTIVE CLOTHING MUST BE WORN WHEN CLEANING THIS APPLIANCE.

NEVER PUMP WATER THROUGH THE FILTRATION PUMP AT ANY TIME! WATER AND HOT OIL ARE AN EXPLOSIVE MIXTURE.

OIL MUST BE ALLOWED TO COOL TO A SAFE TEMPERATURE BEFORE DRAINING. DO NOT OVERFILL OIL BUCKET. ALL SPILLS ONTO THE PRODUCT AND ON THE FLOOR SHOULD BE CLEANED UP IMMEDIATELY.

THE APPLIANCE MUST NOT BE CLEANED WITH A JET OF WATER OR BE STEAM CLEANED. DO NOT USE ACID OR HALOGEN-BASED (E.G. CHLORINE) DESCALING LIQUIDS, FLAMMABLE LIQUIDS, CLEANING AIDS OR CLEANING POWDERS.

FAILURE TO CLEAN AND CHECK THE SAFETY AND OPERATIONAL THERMOSTATS CAN IMPACT THE PERFORMANCE OF THE APPLIANCE AND INCREASE THE RISK OF AN APPLIANCE FIRE.

FAILURE DUE TO LACK OF PROPER CLEANING IS NOT COVERED BY WARRANTY.

Note: All surfaces are easier to clean if spillage is removed before it becomes burnt on, cleaned daily.

Stainless Steel Surfaces

It should be noted that certain scouring pads including nylon types, could easily mark stainless steel. Care should be exercised during cleaning process.

When rubbing stainless steel with a cloth, always rub along in grain direction.

The following procedure should be undertaken, **AT LEAST DAILY.**

10.1 CLEANING THE APPLIANCE



1. Carry out actions detailed in Sections 8 and 9.
2. Unit should be switched **OFF** and fry pot drained of oil.
3. Remove baskets, fry plate and crumb catcher. Soak these components in hot soapy water.
4. With drain valve open, remove any traces of debris from fry pot using a clean, damp cloth.
NOTE: Care should be taken not to damage sensors located at pan front.
5. Remove strainer and micro-filter, soak these in hot soapy water.
6. Wash, rinse and dry removed items thoroughly. Set these aside.
7. Close drain valve.
8. Fill fry pot to 3/4 full with hot water.
9. Clean pan using a soft, clean cloth and hot soapy water. Rub away any stubborn staining with a scouring pad and suitable detergent.
10. Clean the safety and operating thermostats removing any food debris from around the thermostats which could detrimentally affect the performance and safety of the appliance.

TAKE CARE WHEN CLEANING NOT TO DISLODGE OR DAMAGE THERMOSTAT PROBES MOUNTED ON THE BASE AND SIDE OF THE PAN.




DISLODGING OR DAMAGING THE THERMOSTAT PROBES OR THEIR CAPILLARIES CAN INCREASE THE RISK OF OVERHEATING OR FIRE.

IF THE THERMOSTATS OR CAPILLARIES ARE DAMAGED THEN DO NOT TURN THE APPLIANCE ON. CONTACT FALCON OR YOUR APPROVED SERVICE PROVIDER TO UNDERTAKE THE NECESSARY REPAIRS.

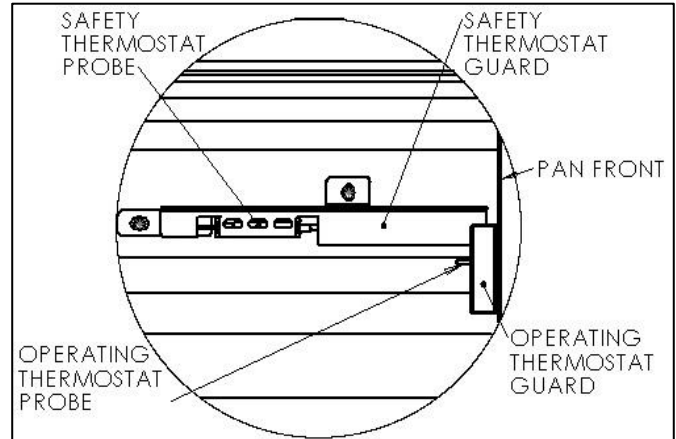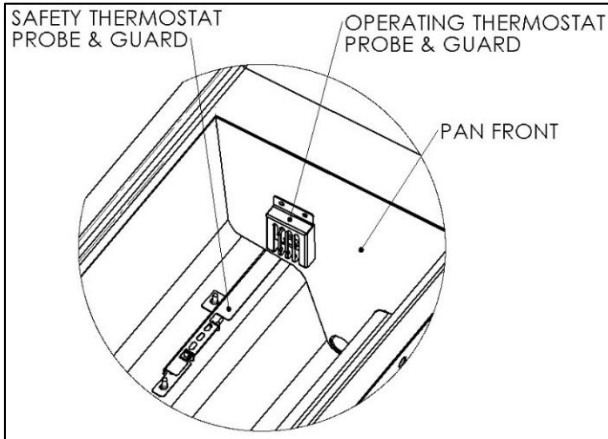

Location of Safety and Operating Thermostat Probes

11. Slide up the oil level sensor guard (G3840X/G3840FX/G3840XP/G3840FXP only).

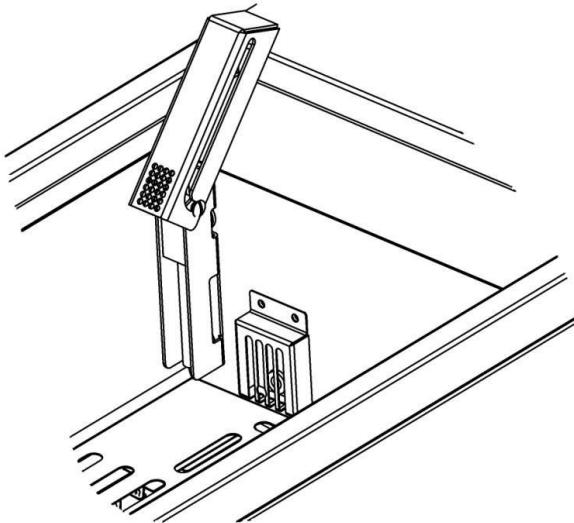


Oil level sensor guard raised for cleaning

12. Clean guard and sensor probe using a soft, clean cloth and hot soapy water (G3840X/G3840FX/G3840XP/G3840FXP only).

NOTE: Care should be taken not to damage the oil level sensor probe located at the front of the pan.

13. Open drain valve. Drain water into bucket below.
14. Use clean water to rinse fry pot and dry thoroughly.
15. Close drain valve.
16. Return crumb catcher, fry plate and baskets to pan.
17. Slide down oil level sensor guard (G3840X/G3840FX/G3840XP/G3840FXP only).

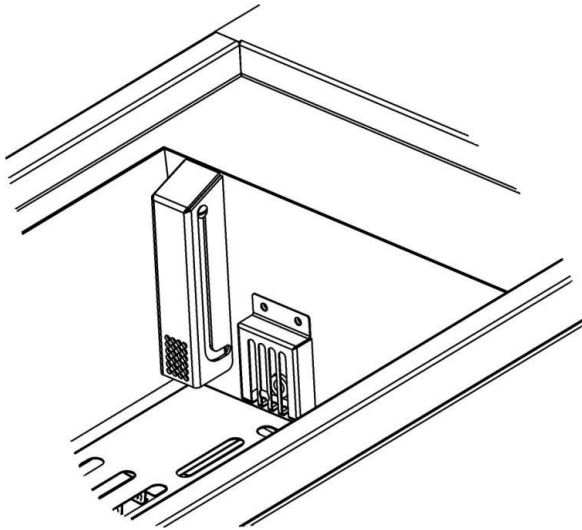

Oil level sensor guard lowered for normal operation

18. Remove oil bucket by pulling forward then upward.
19. Use handles and lift oil bucket to sink.
20. Pour away soiled water.

Note – All spills onto this product and on the floor should be cleaned up immediately.

21. Thoroughly wash, rinse and dry oil bucket and oil suction pipe.
22. Replace strainer and microfilter in oil bucket and return oil bucket to cradle.
23. Fill fry pot with clean oil/solid/shortening to -MIN- mark. To relight, refer to Section 6.2.

11.0 PREPARATION OF SOLID FATS / SHORTENING

COOKING HINTS

Allow approximately 10 minutes for unit to heat up from cold to required operating temperature.

CHOICE OF FRYING MEDIUM

Select a top quality medium to obtain optimum results. Shortening or solid fats can be used if necessary.

Solid fats **MUST** be heated carefully as these have a lower smoke point temperature than shortening.

A fat melt cycle will pulse heat into the fryer.

A quality shortening is a more stable frying medium. It allows longer periods of use without smoking or foaming. It will also give food a better flavour.

Quality shortening has a higher flashpoint temperature and will reduce gumming around pan.

Regular filtering will help extend lifespan of the medium.



WARNING
NEVER MIX SHORTENING AND SOLID FAT!

Charging the Pan

Prior to operation, clean fry pot out using hot water and detergent. Rinse out and dry thoroughly.

Ensure drain valve is closed. Fill fry pot with cold shortening to -MIN- level mark on fry plate.

Maximum oil level capacity is 18 litres.

Solid Fat

G3840X/G3840FX Only – For first use it is recommended that the solid fat is pre-melted before being added to the fry pot.

If solid fat is to be used, remove fish plate and cut fat into small pieces. Place 17kg in fry pot and pack it down.

Position fry plate upon fat and push front end into it lightly until front edge is below temperature probe.

Ensure FAT MELT CYCLE is selected for this process.

Note - Fry plate will lower slowly into fry pot as solid fat melts.

WARNING



If fish plate does not sit flat, lift plate from centre slightly and lower carefully to ensure that no splashing of hot shortening occurs. Check that correct shortening level is achieved when all solid fat has melted. Required temperature may then be set. Solid fat should always be heated this way to prevent overheating and burning.



WARNING

It is dangerous to use shortening that is too old. Such shortening has a reduced flash point temperature and is prone to surge boiling.



CAUTION

To prevent surge boiling. **DO NOT EXCEED** recommended loads or charge pan with over-wet food items. **NEVER** leave a working appliance unattended.

12.0 COOKING HINTS

Frying food involves many variables and the following information is a guide only.

1. Ensure frying medium is clean and free of debris.
2. When topping up with oil, ensure oil level does not exceed -MIN- line when cold and -MAX- line when hot.
3. Never overfill baskets with food product.




Warning (G3840X/G3840FX/G3840XP/G3840FXP only)

Do not pour food stuffs directly onto the oil level sensor guard, as this may affect the performance of the oil level sensor.


4. Filter oil as often as possible. This can be done when oil temperature is below 180°C.
5. It is advised that a skimmer should be used continuously between frying batches to remove any floating debris. Failure to do this may result in the oil becoming bitter to taste.
6. During quiet spells, it is recommended that thermostat is turned down to a lower setting. This will conserve energy in addition to extending expected oil life.
7. To ensure a good eating experience, fry food as close to serving time as possible.
8. After serving and when fryer has been turned off, replace lid to ensure that no foreign bodies can contaminate frying medium.

13.0 WIRING DIAGRAMS


13.1 G3840 WIRING DIAGRAM

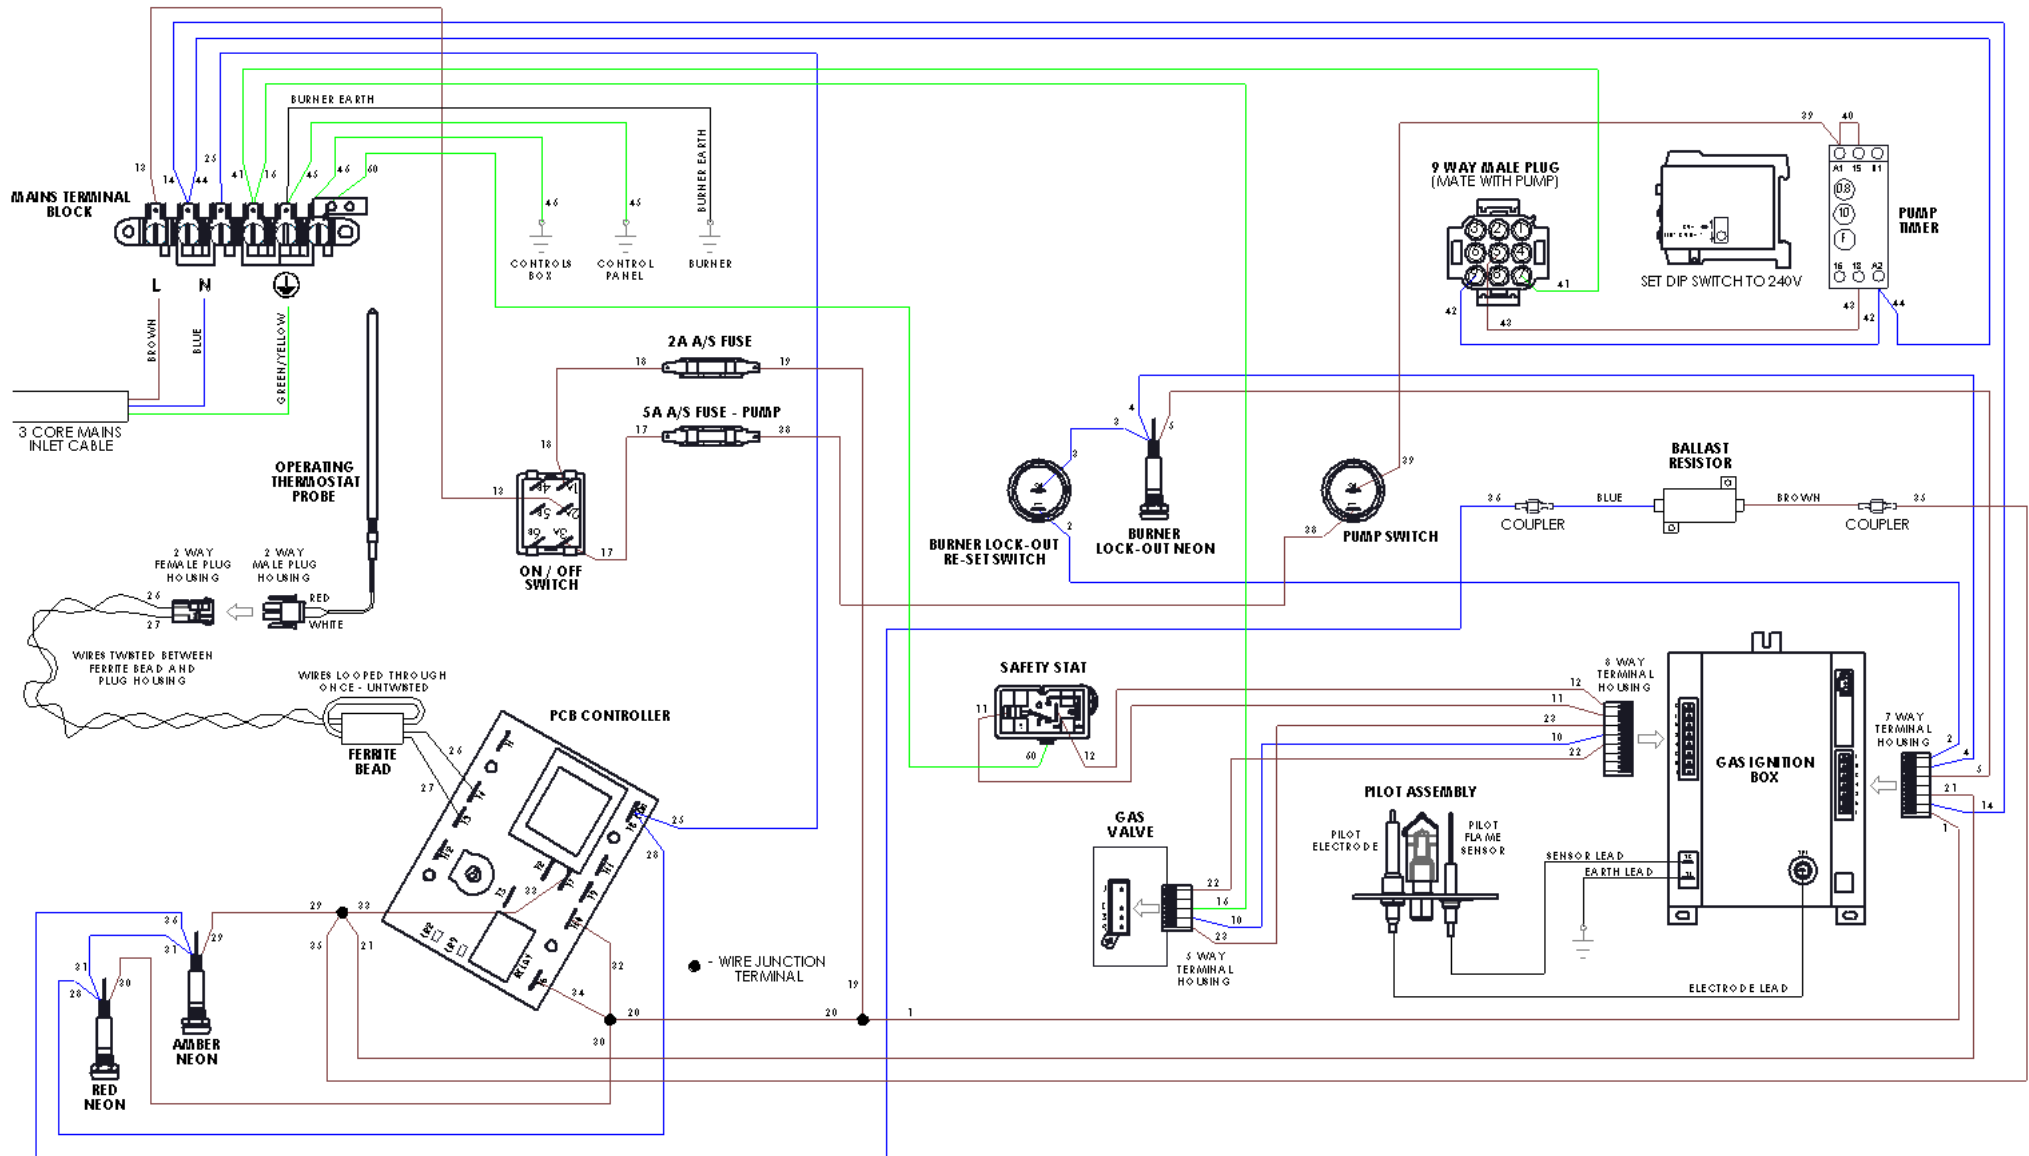


13.2 G3840X WIRING DIAGRAM

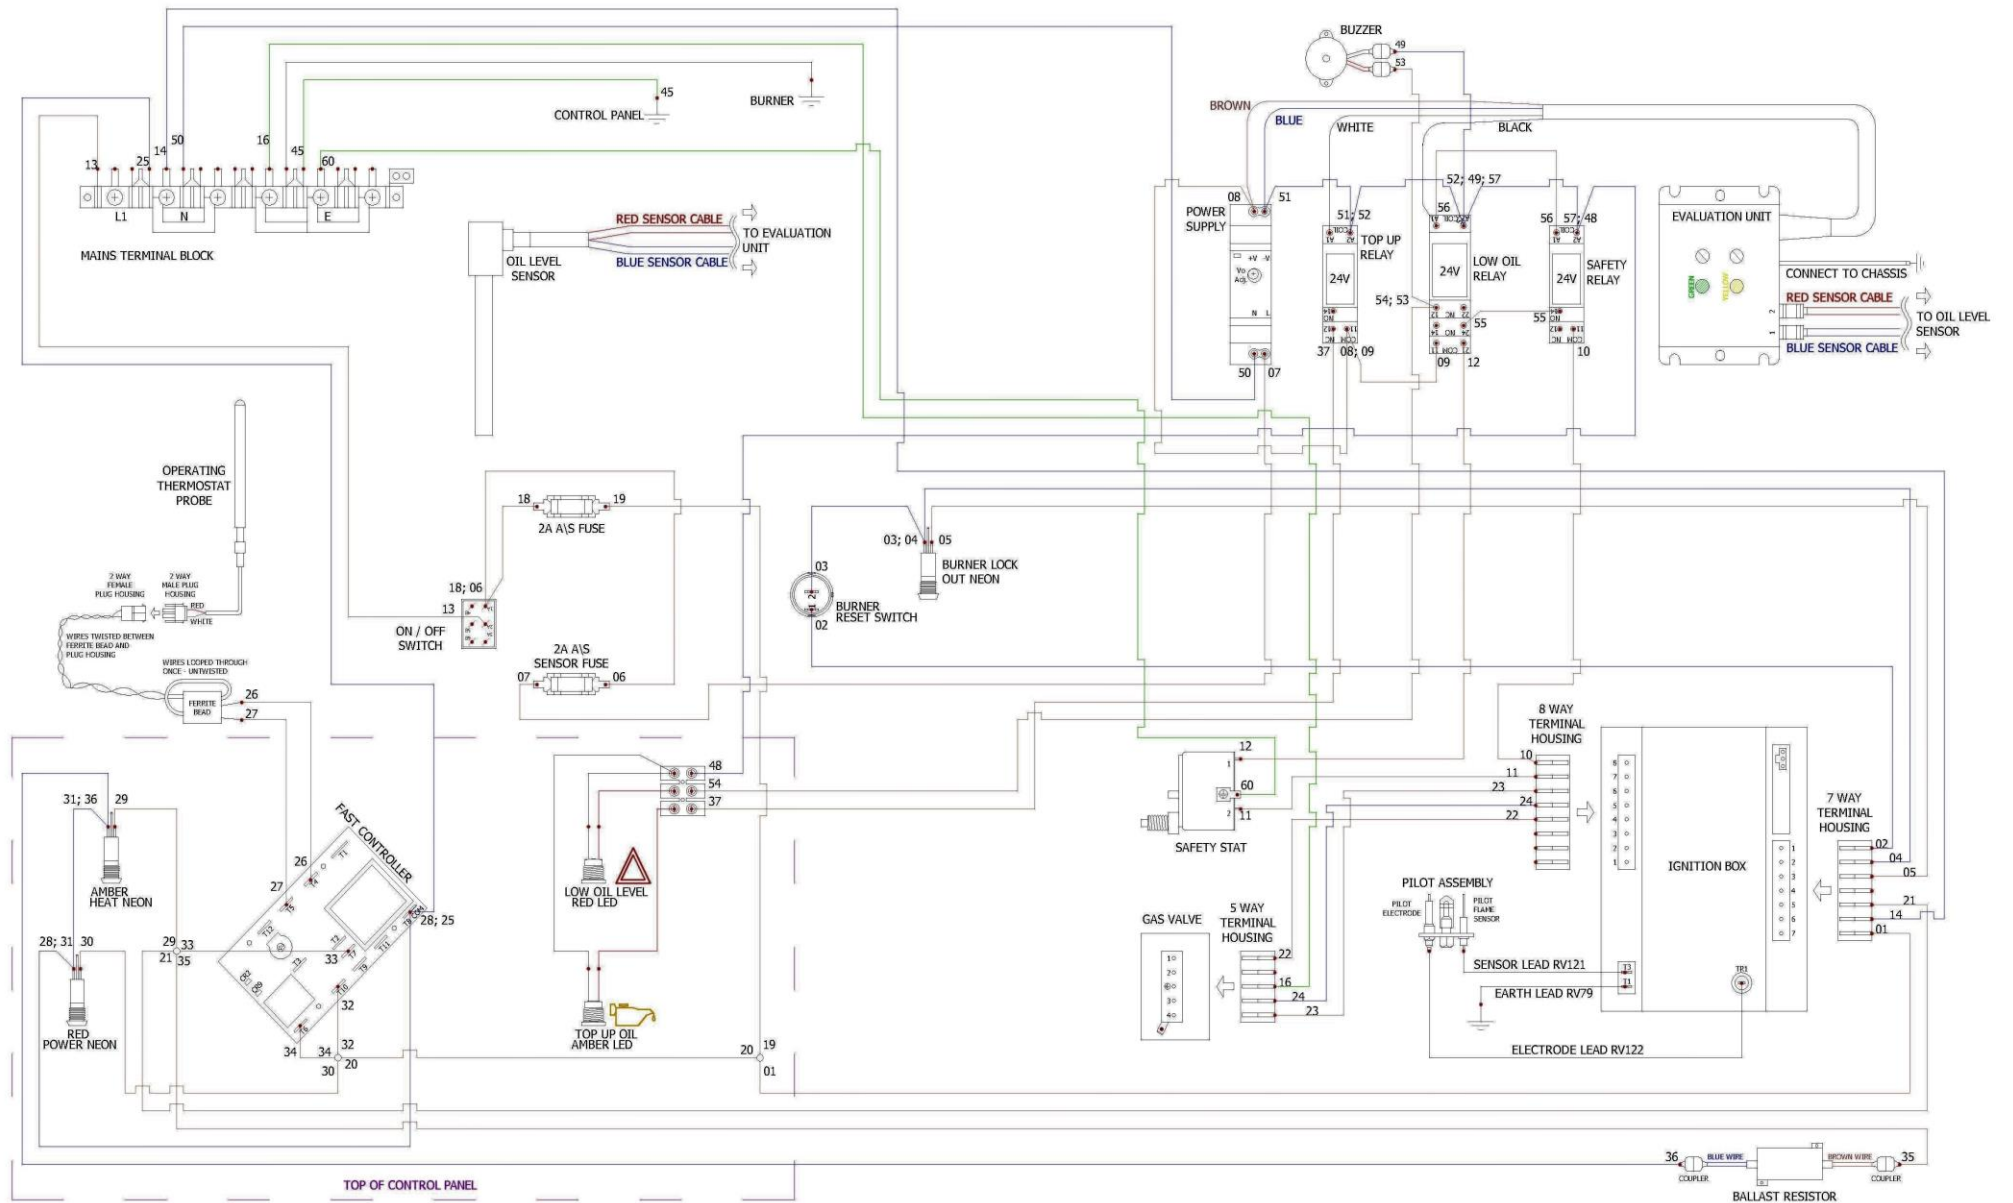


13.3 G3840P WIRING DIAGRAM

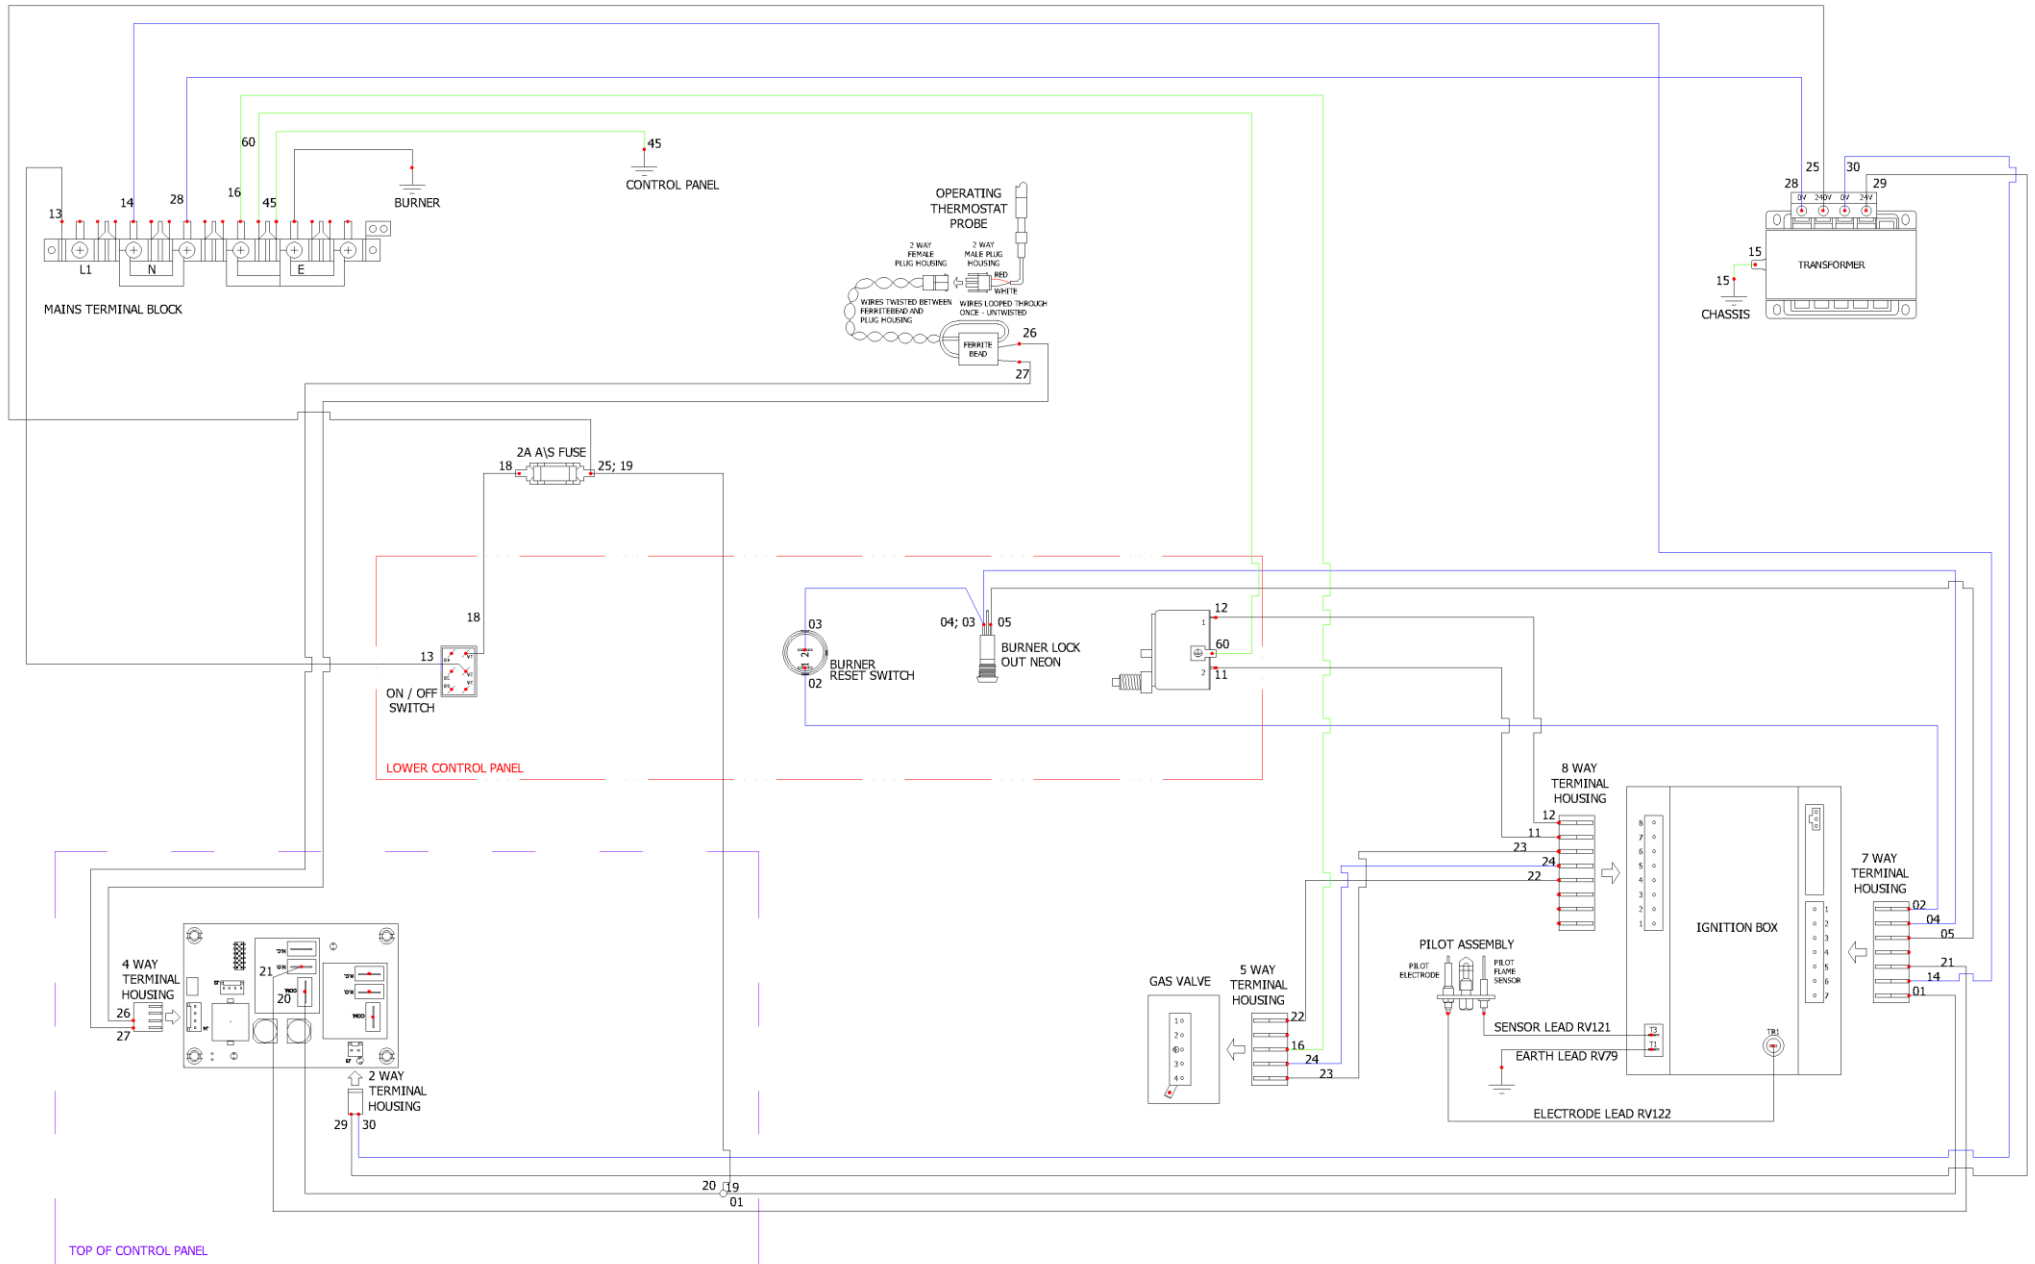


13.4 G3840XP WIRING DIAGRAM

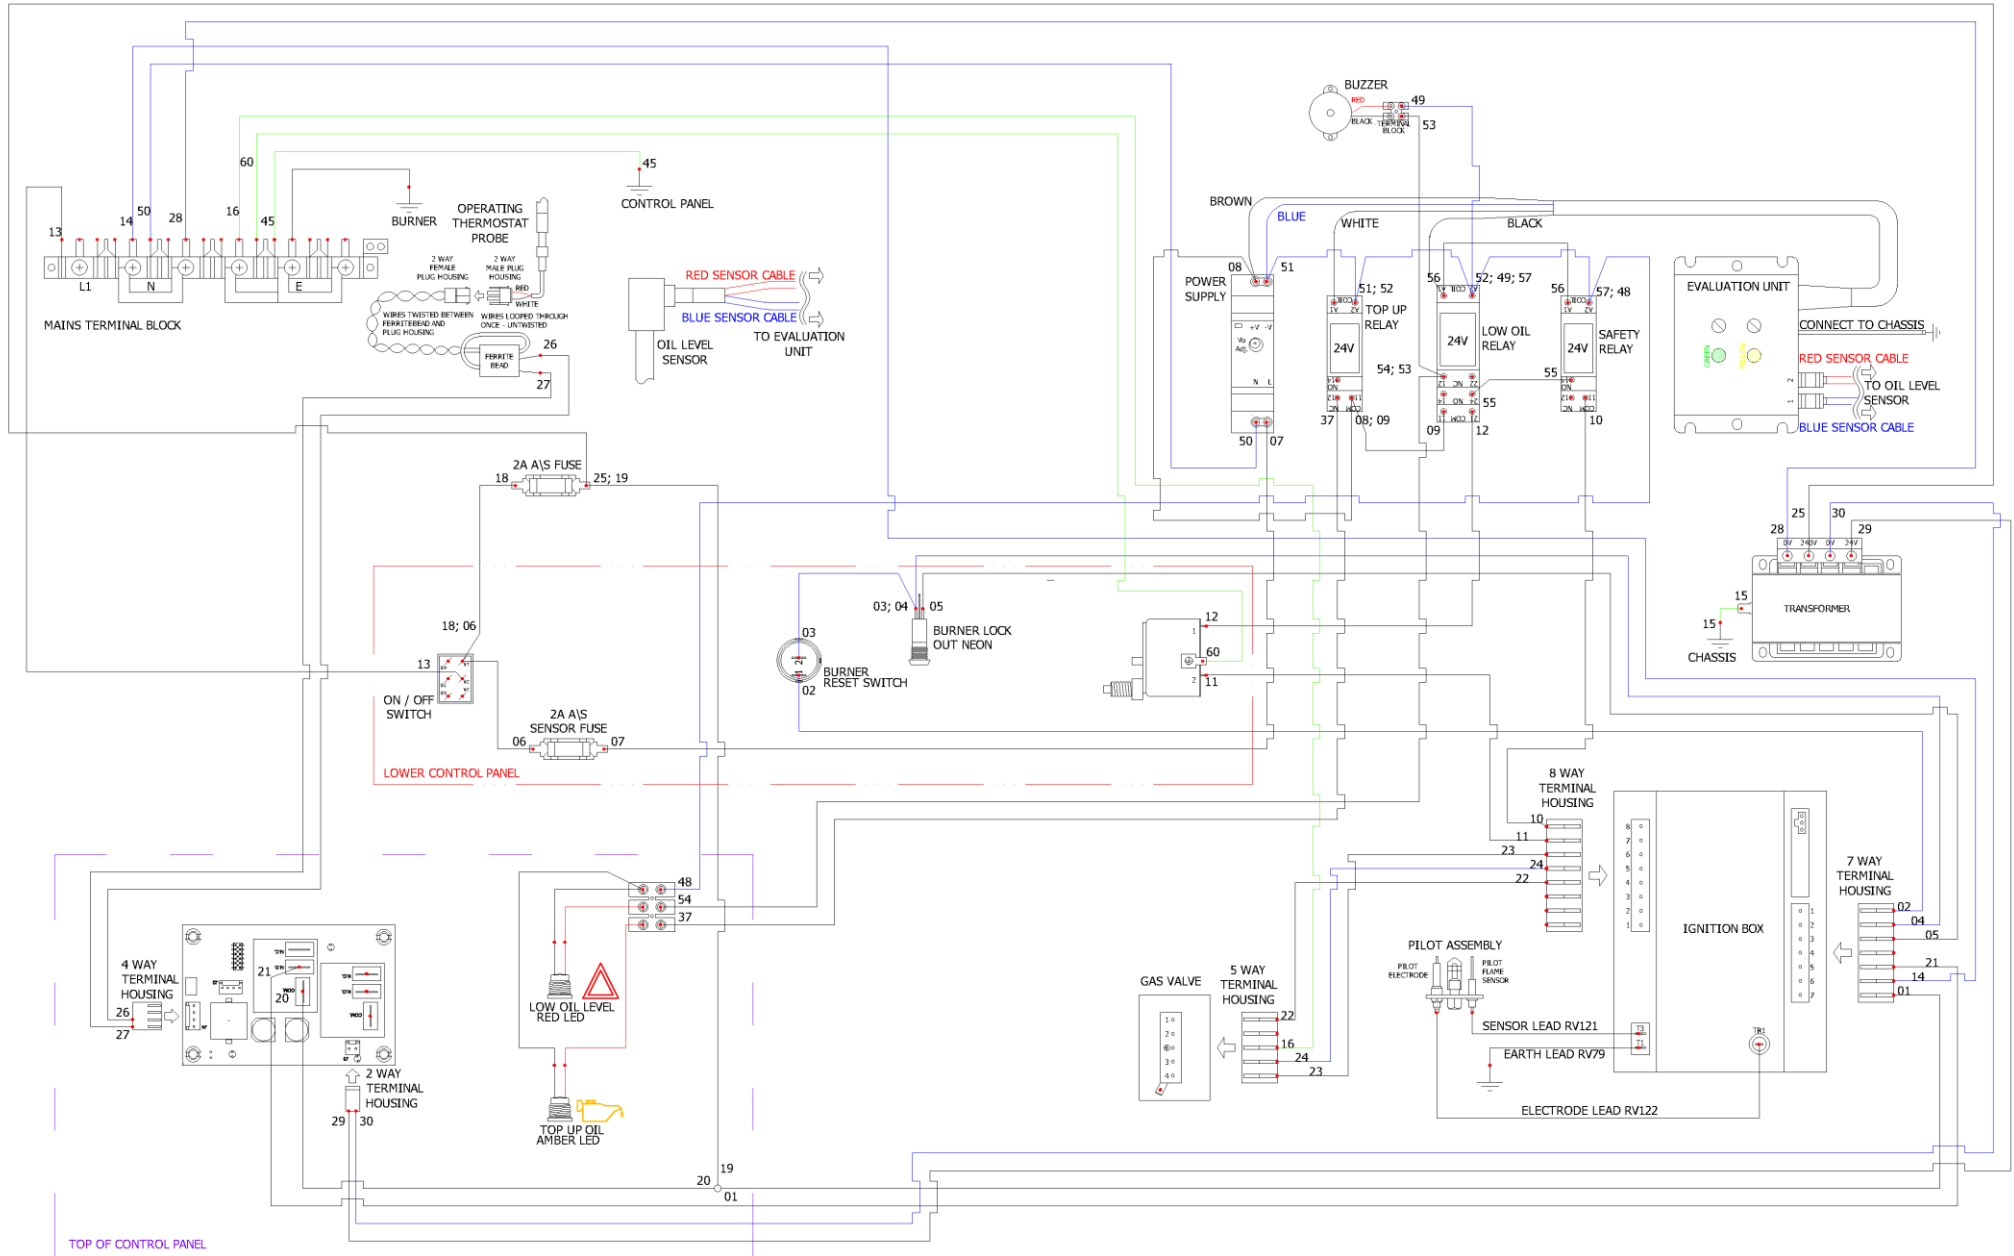


13.5 G3840F WIRING DIAGRAM

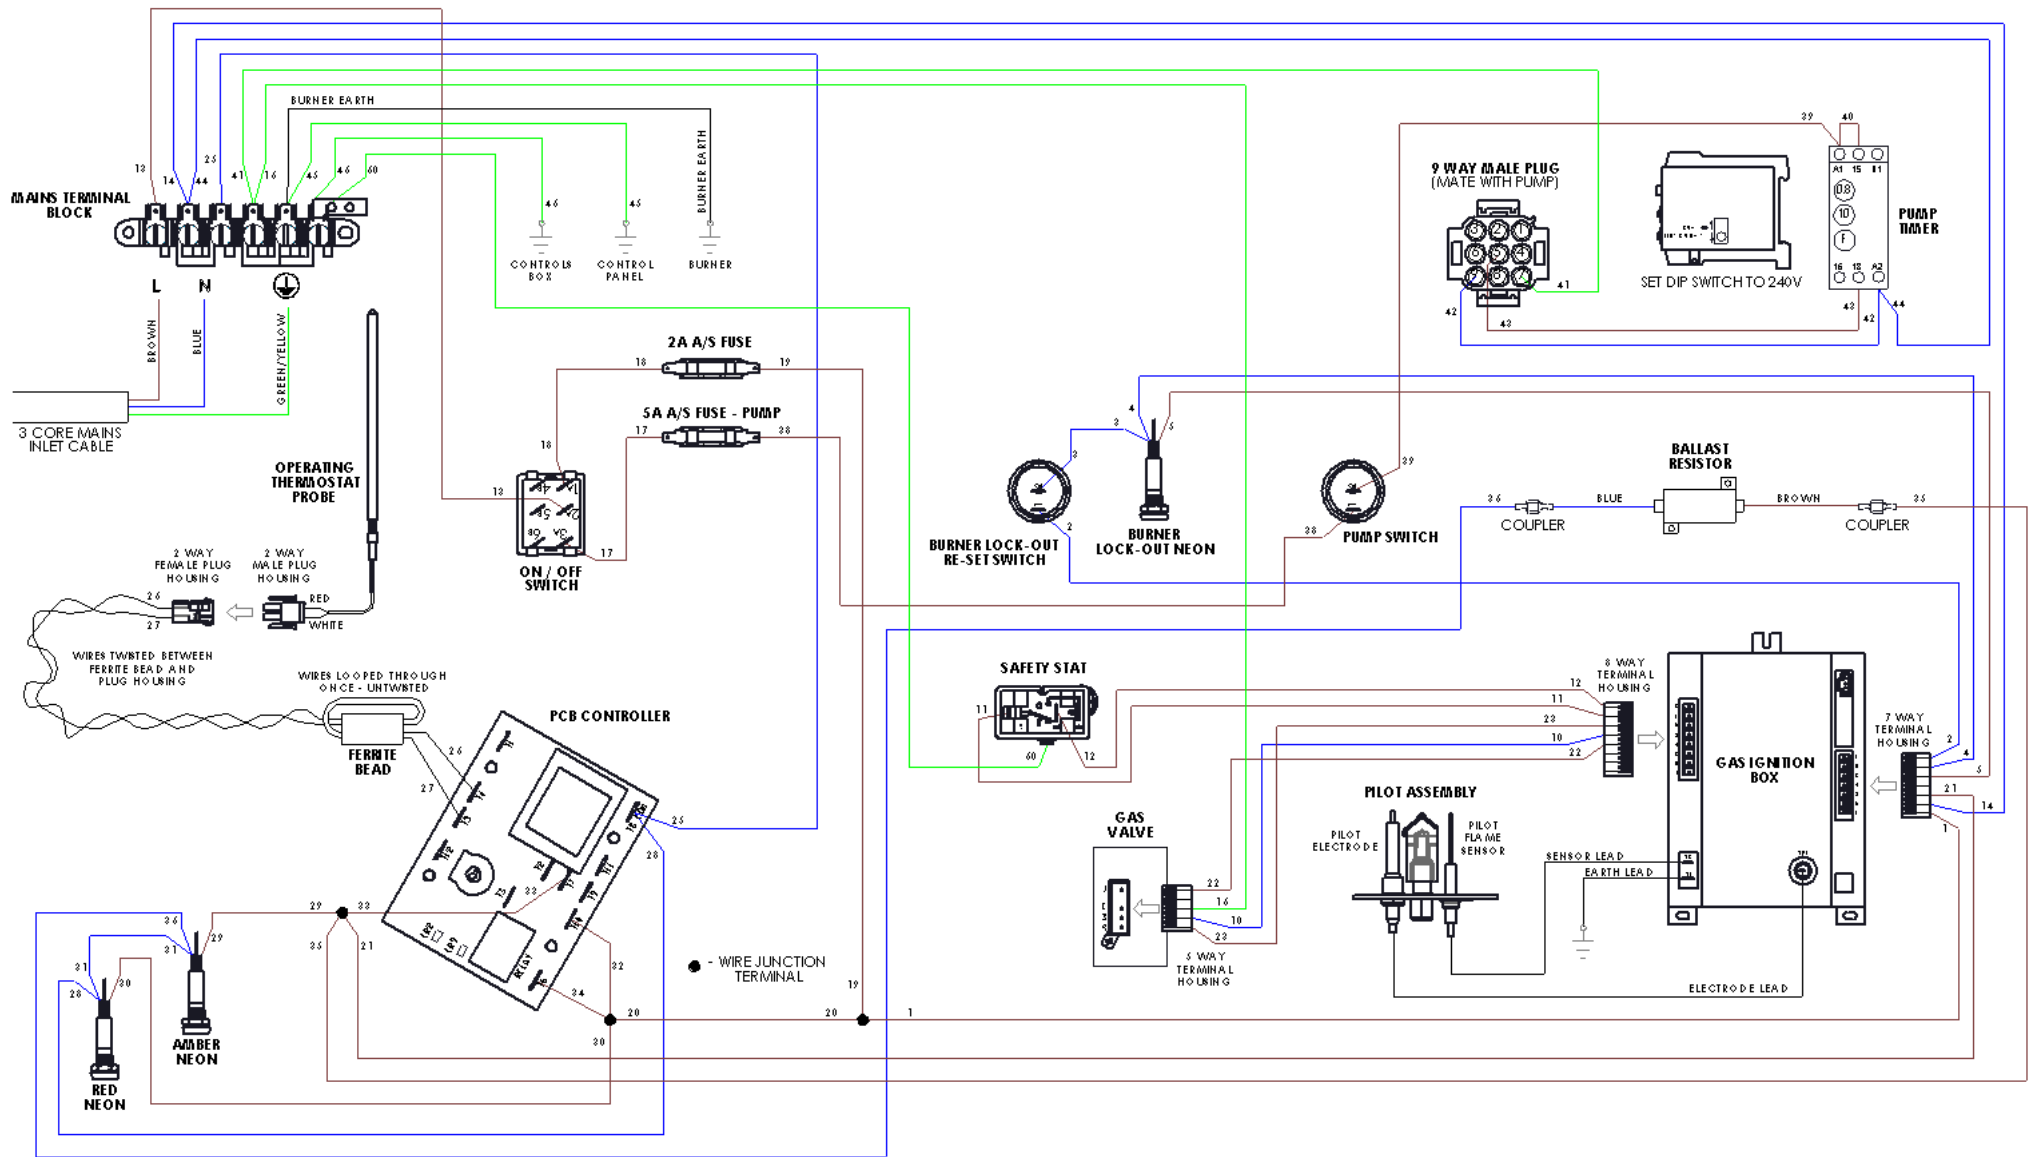


13.6 G3840FP WIRING DIAGRAM

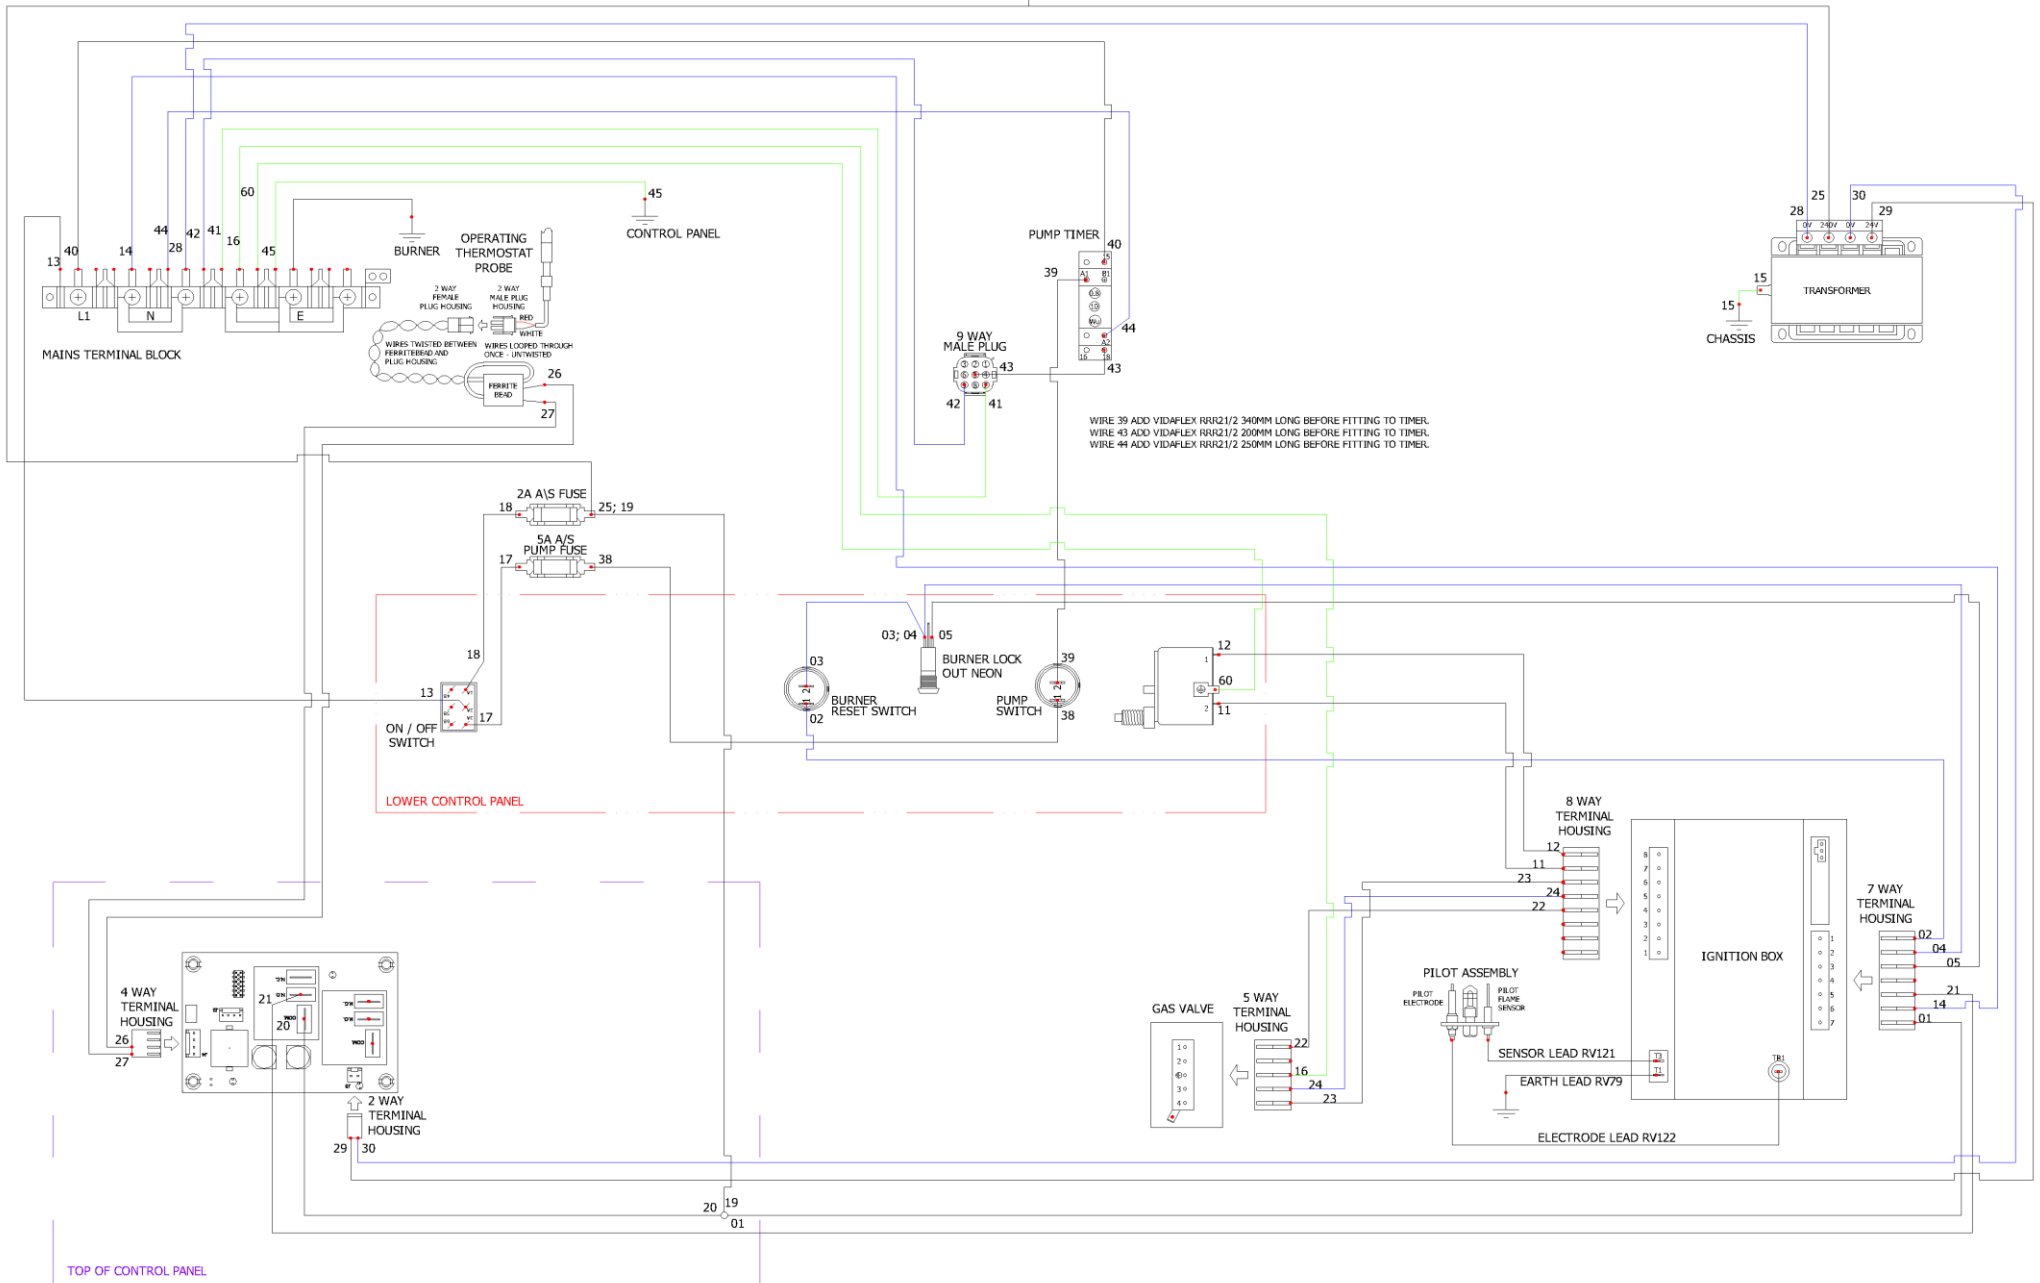


13.7 G3840FX WIRING DIAGRAM

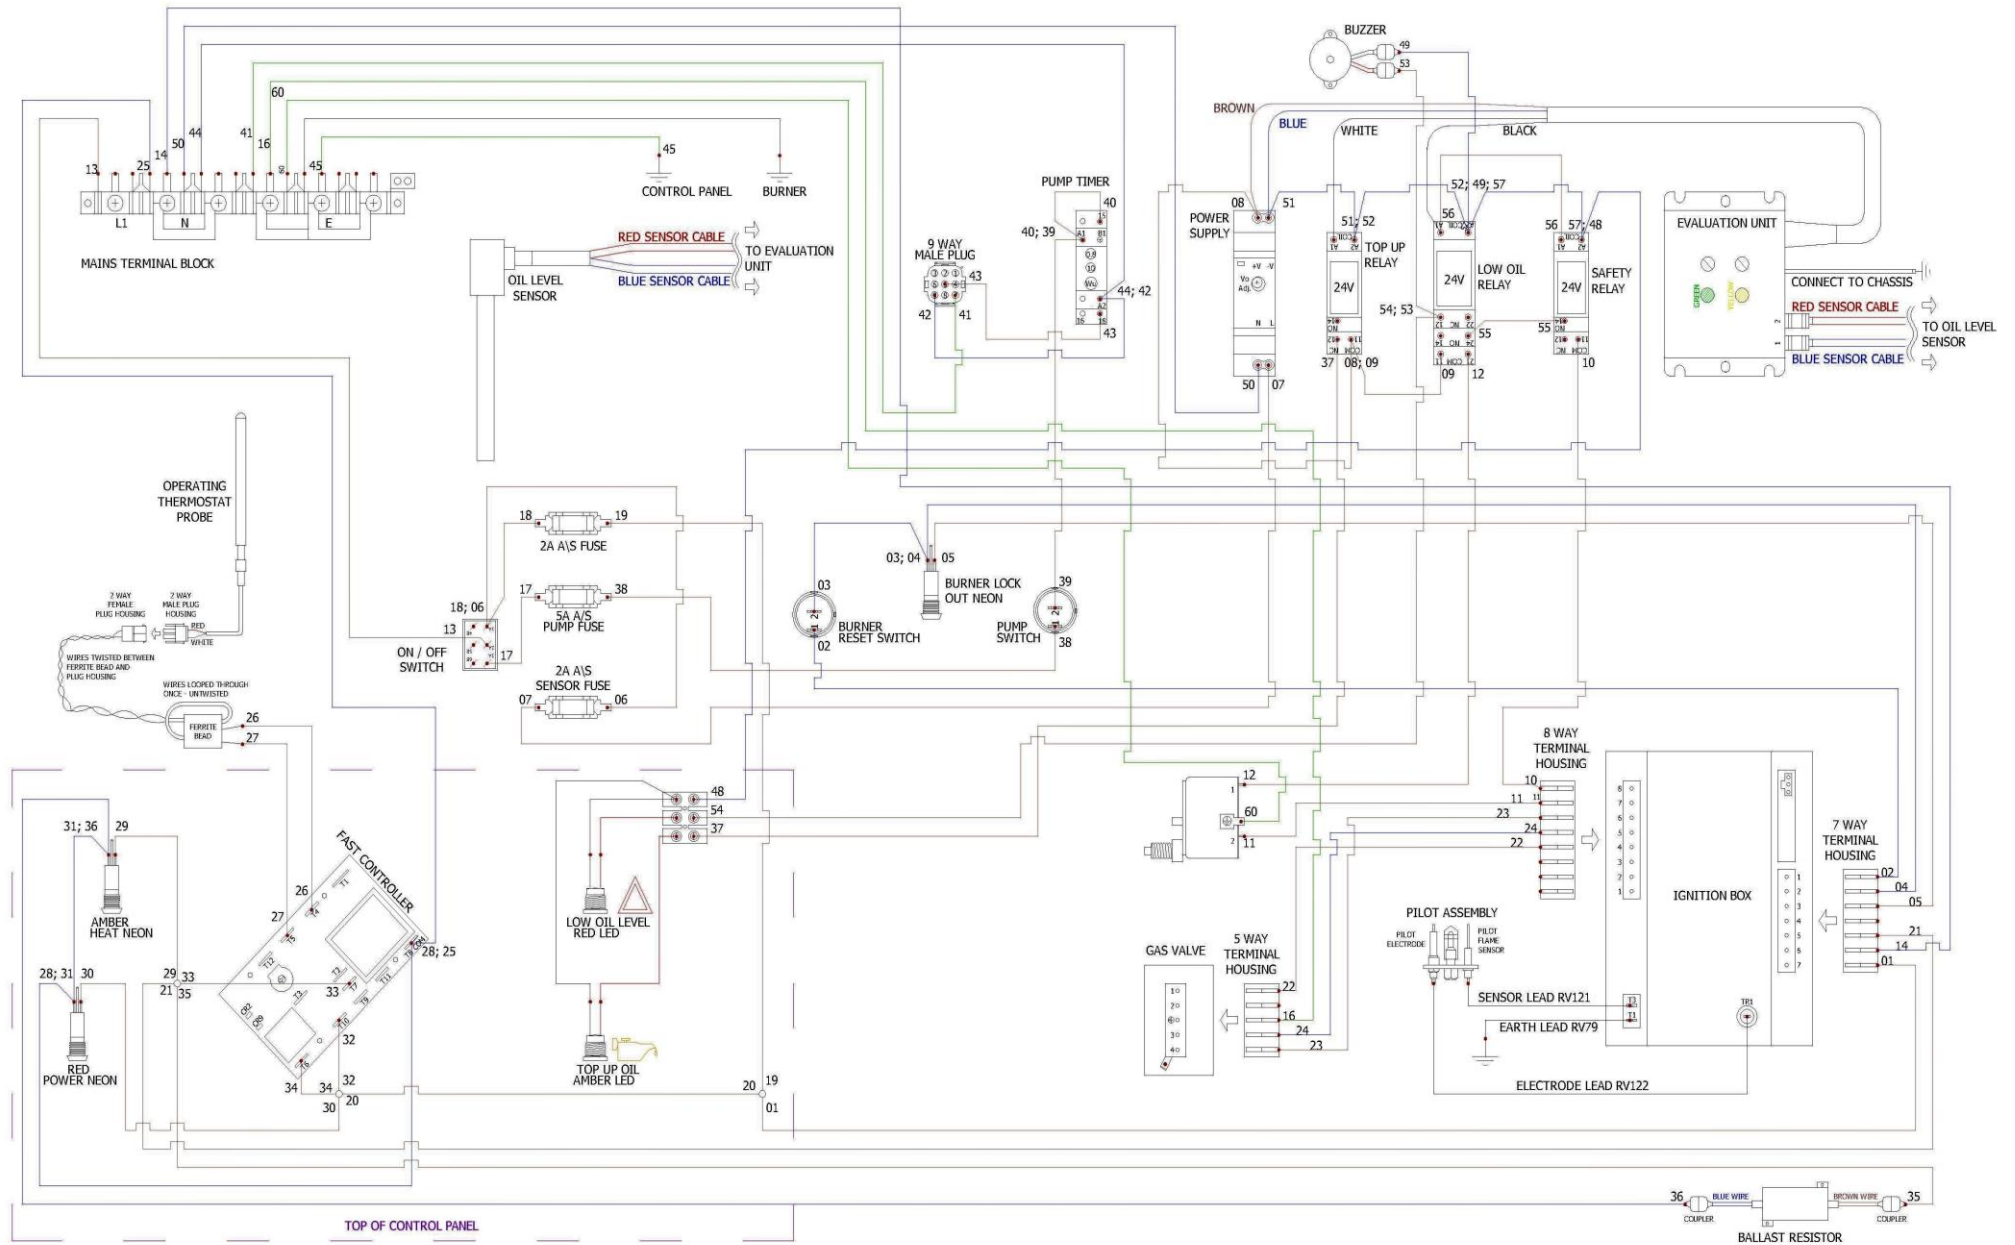


13.8 G3840FXP WIRING DIAGRAM

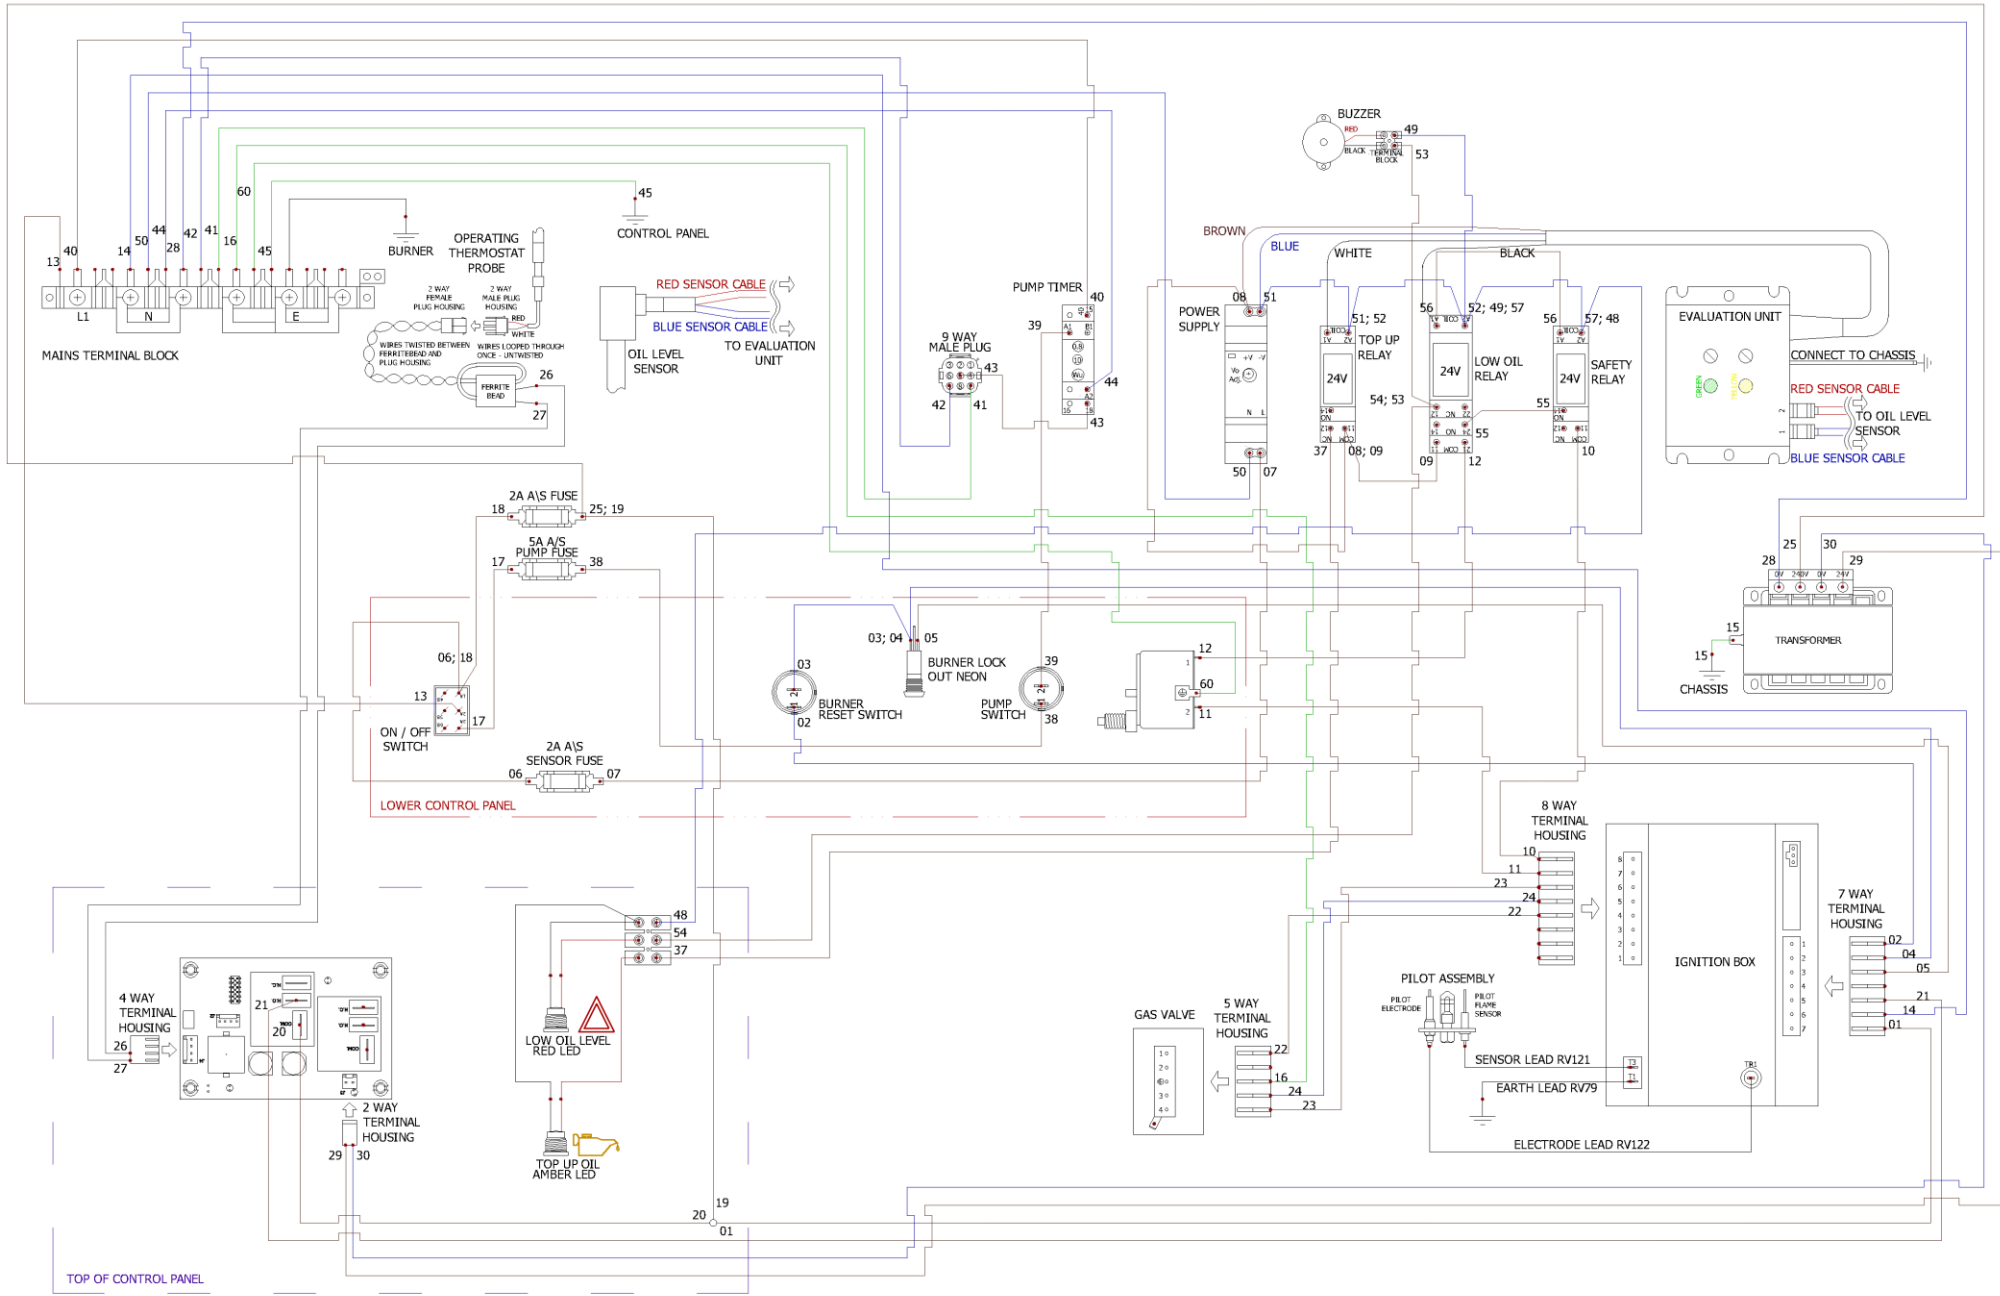


13.9 G3840 CIRCUIT DIAGRAM

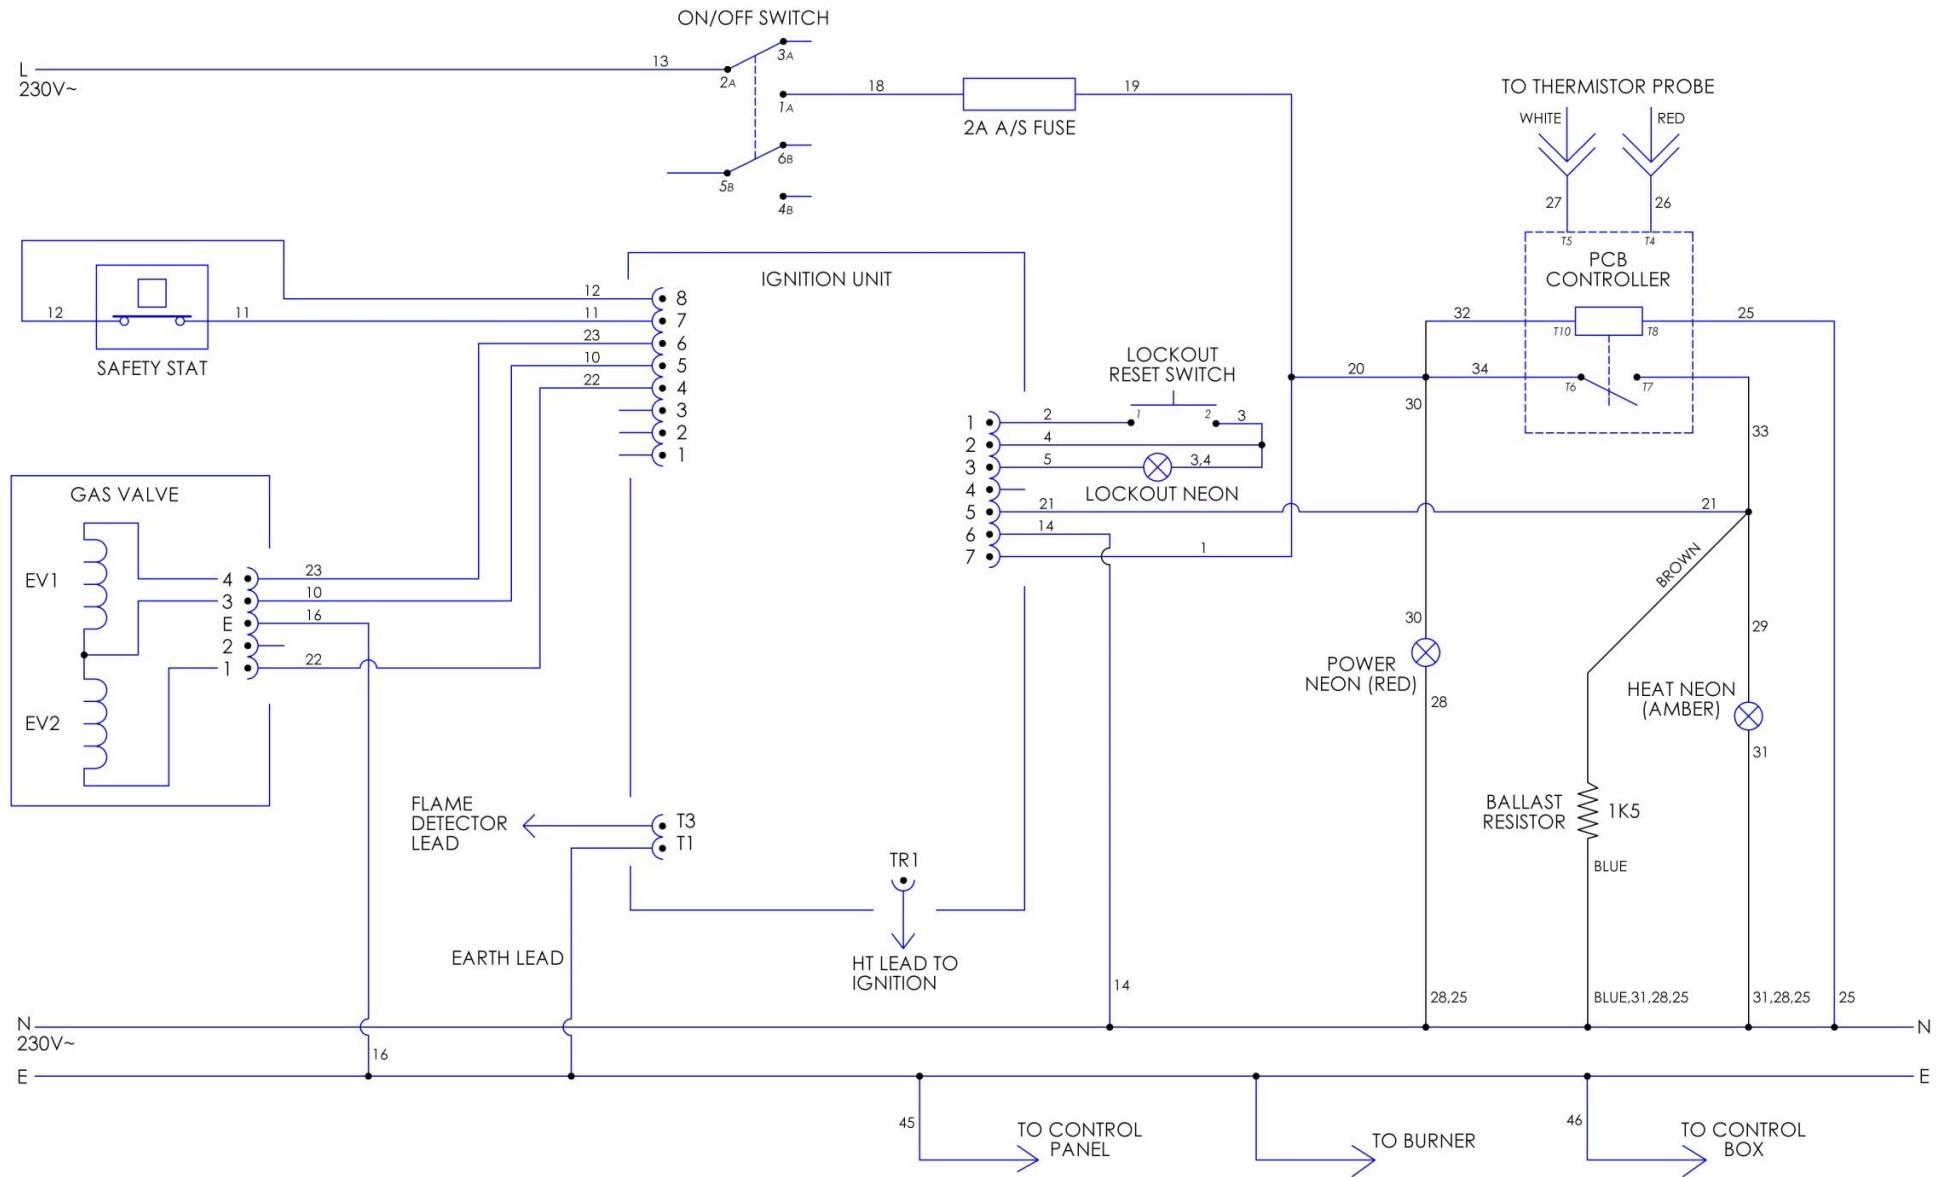


13.10 G3840X CIRCUIT DIAGRAM

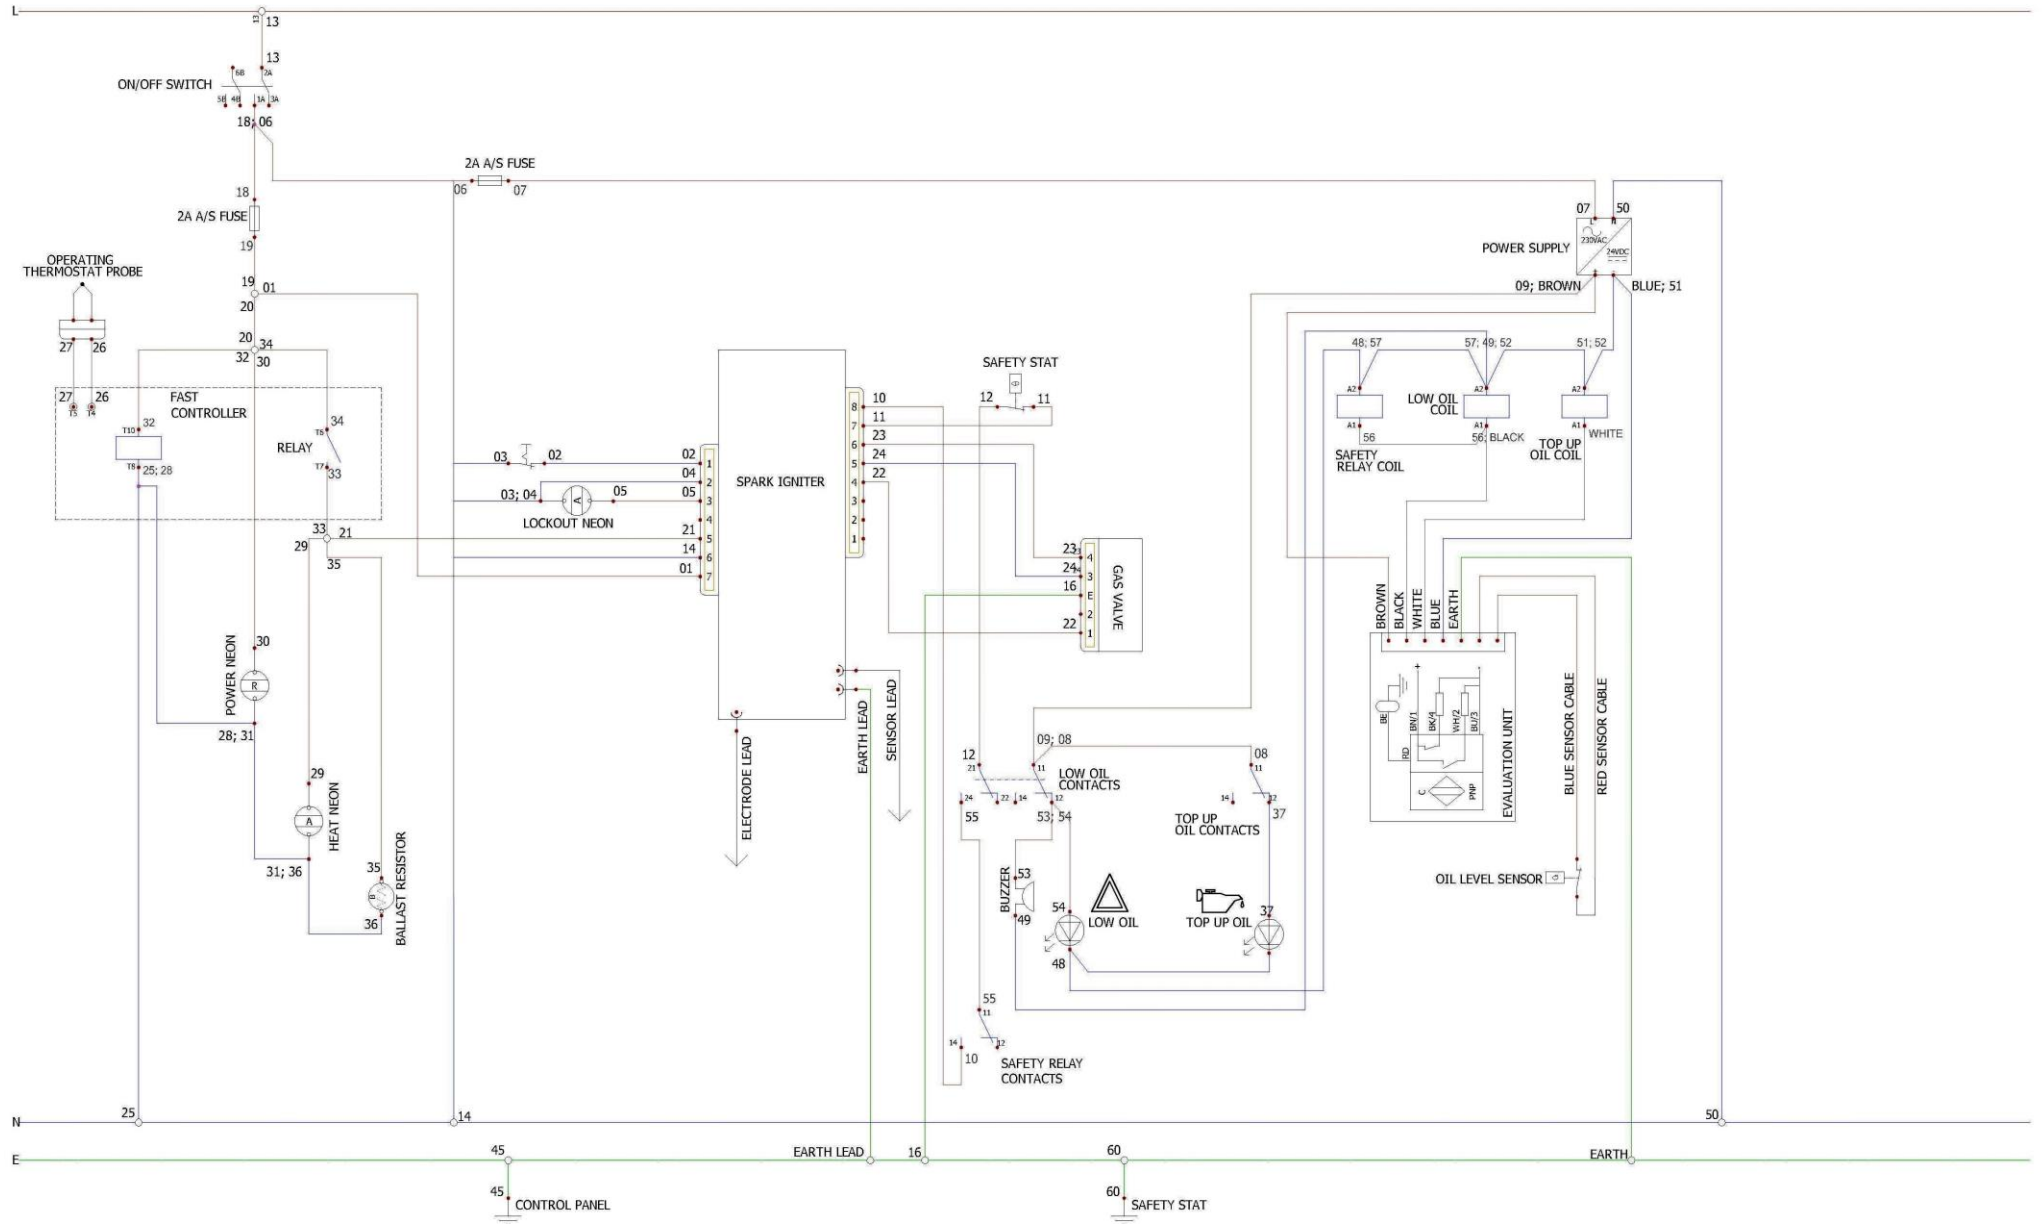


13.11 G3840P CIRCUIT DIAGRAM

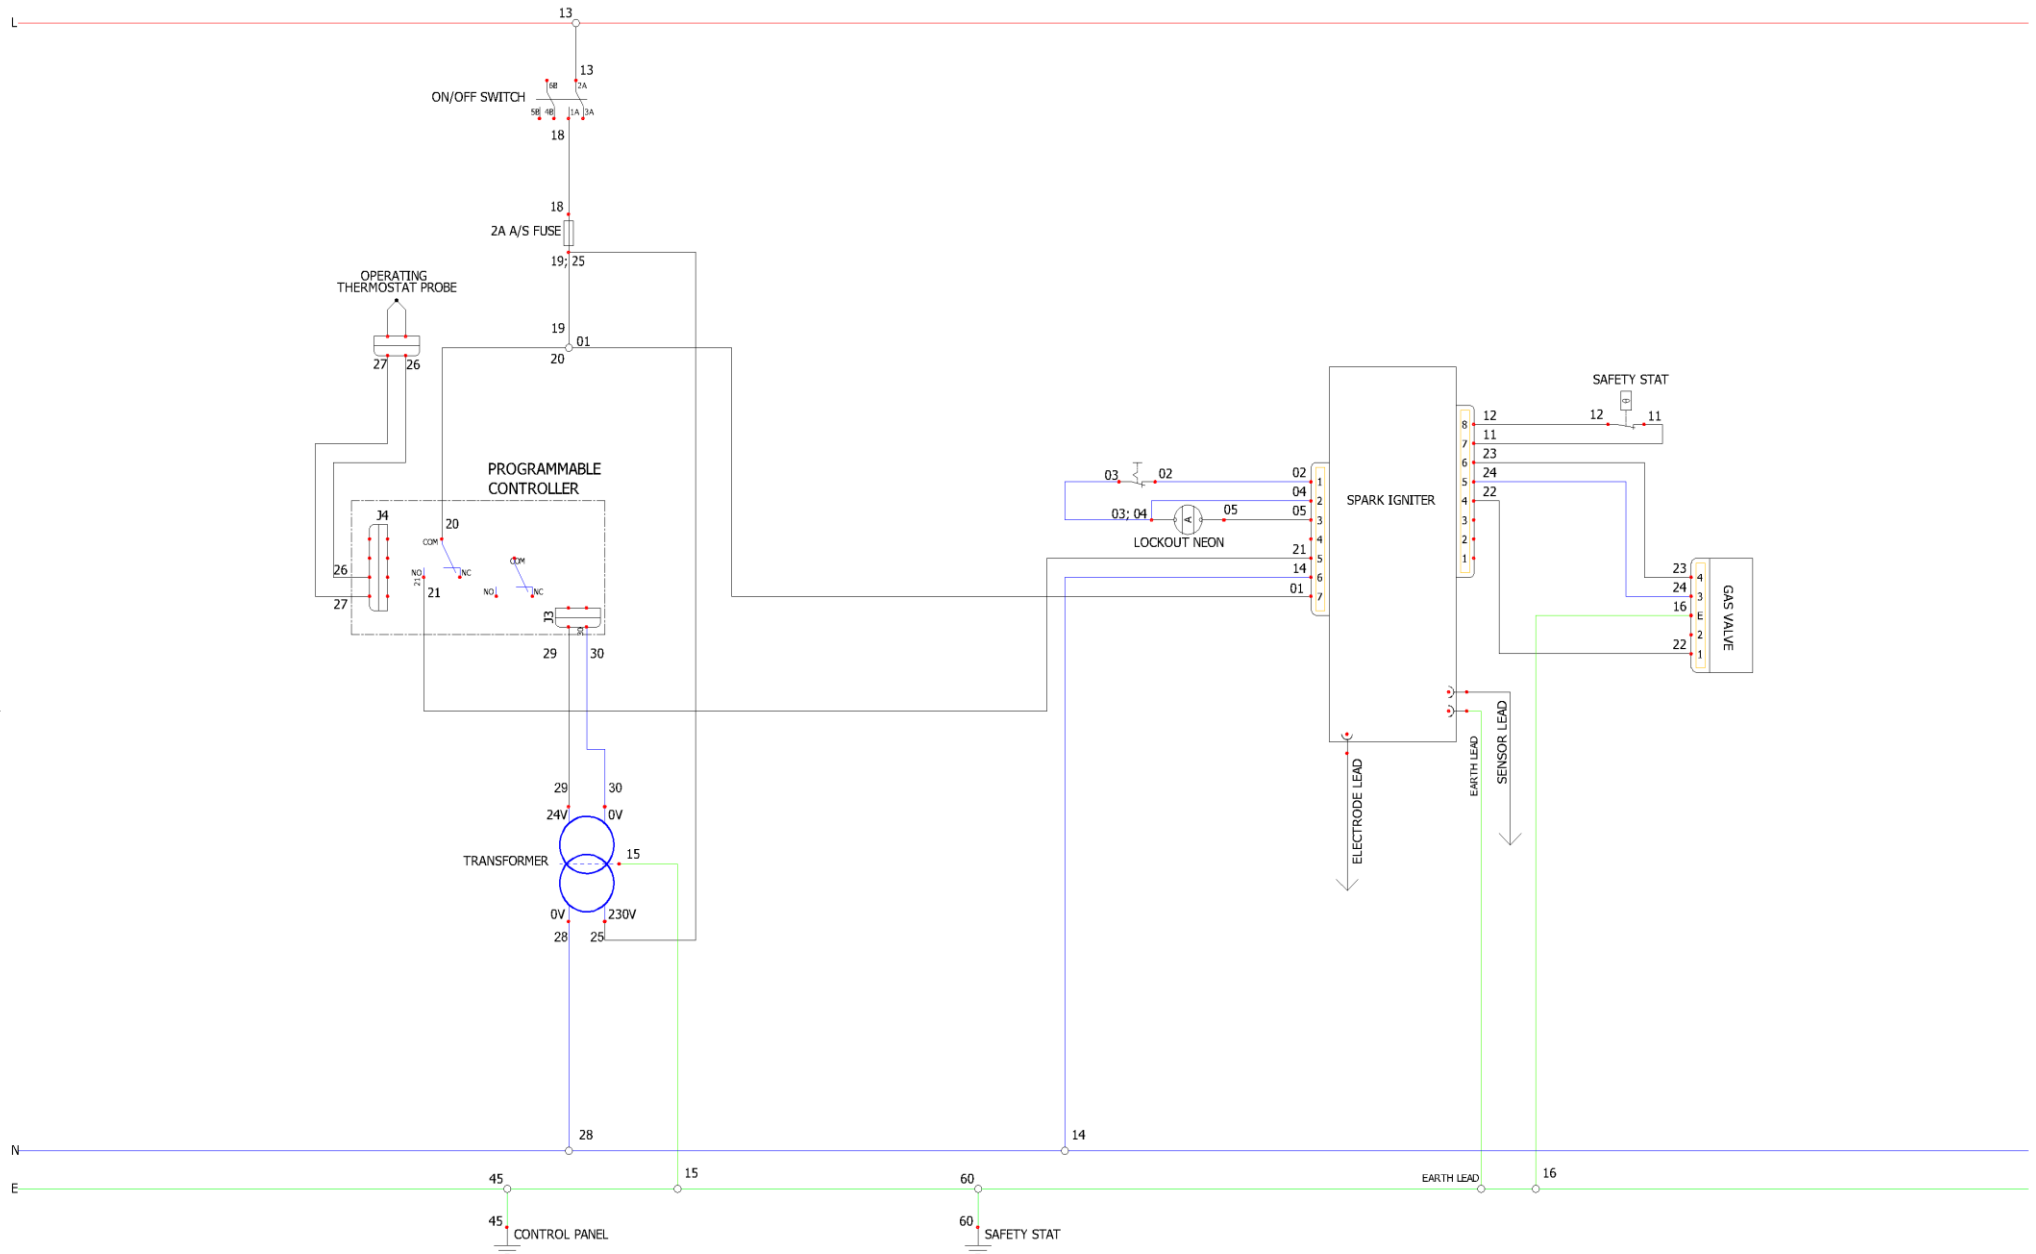


13.12 G3840XP CIRCUIT DIAGRAM

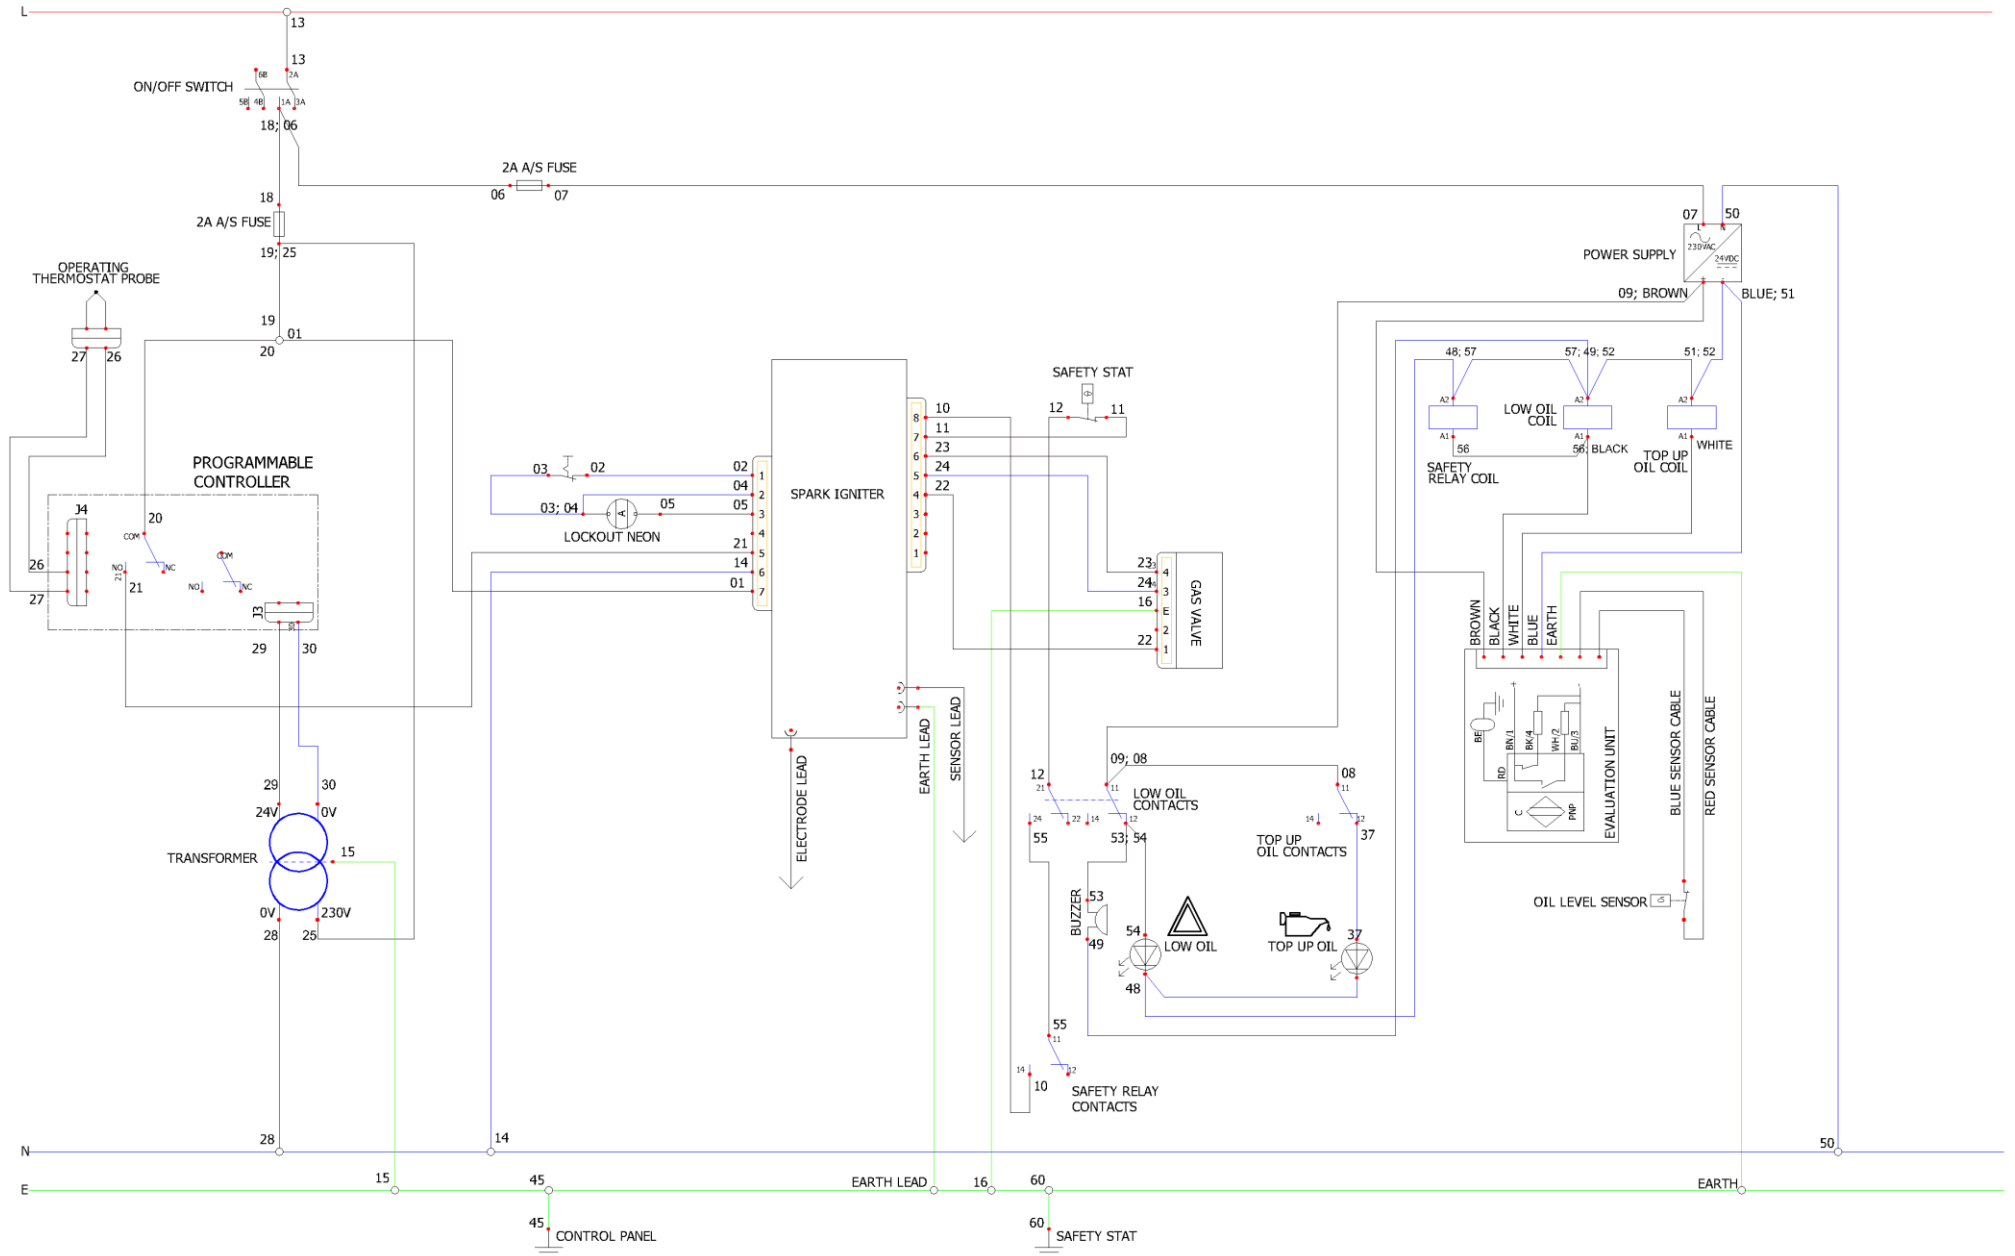

13.13 G3840F CIRCUIT DIAGRAM

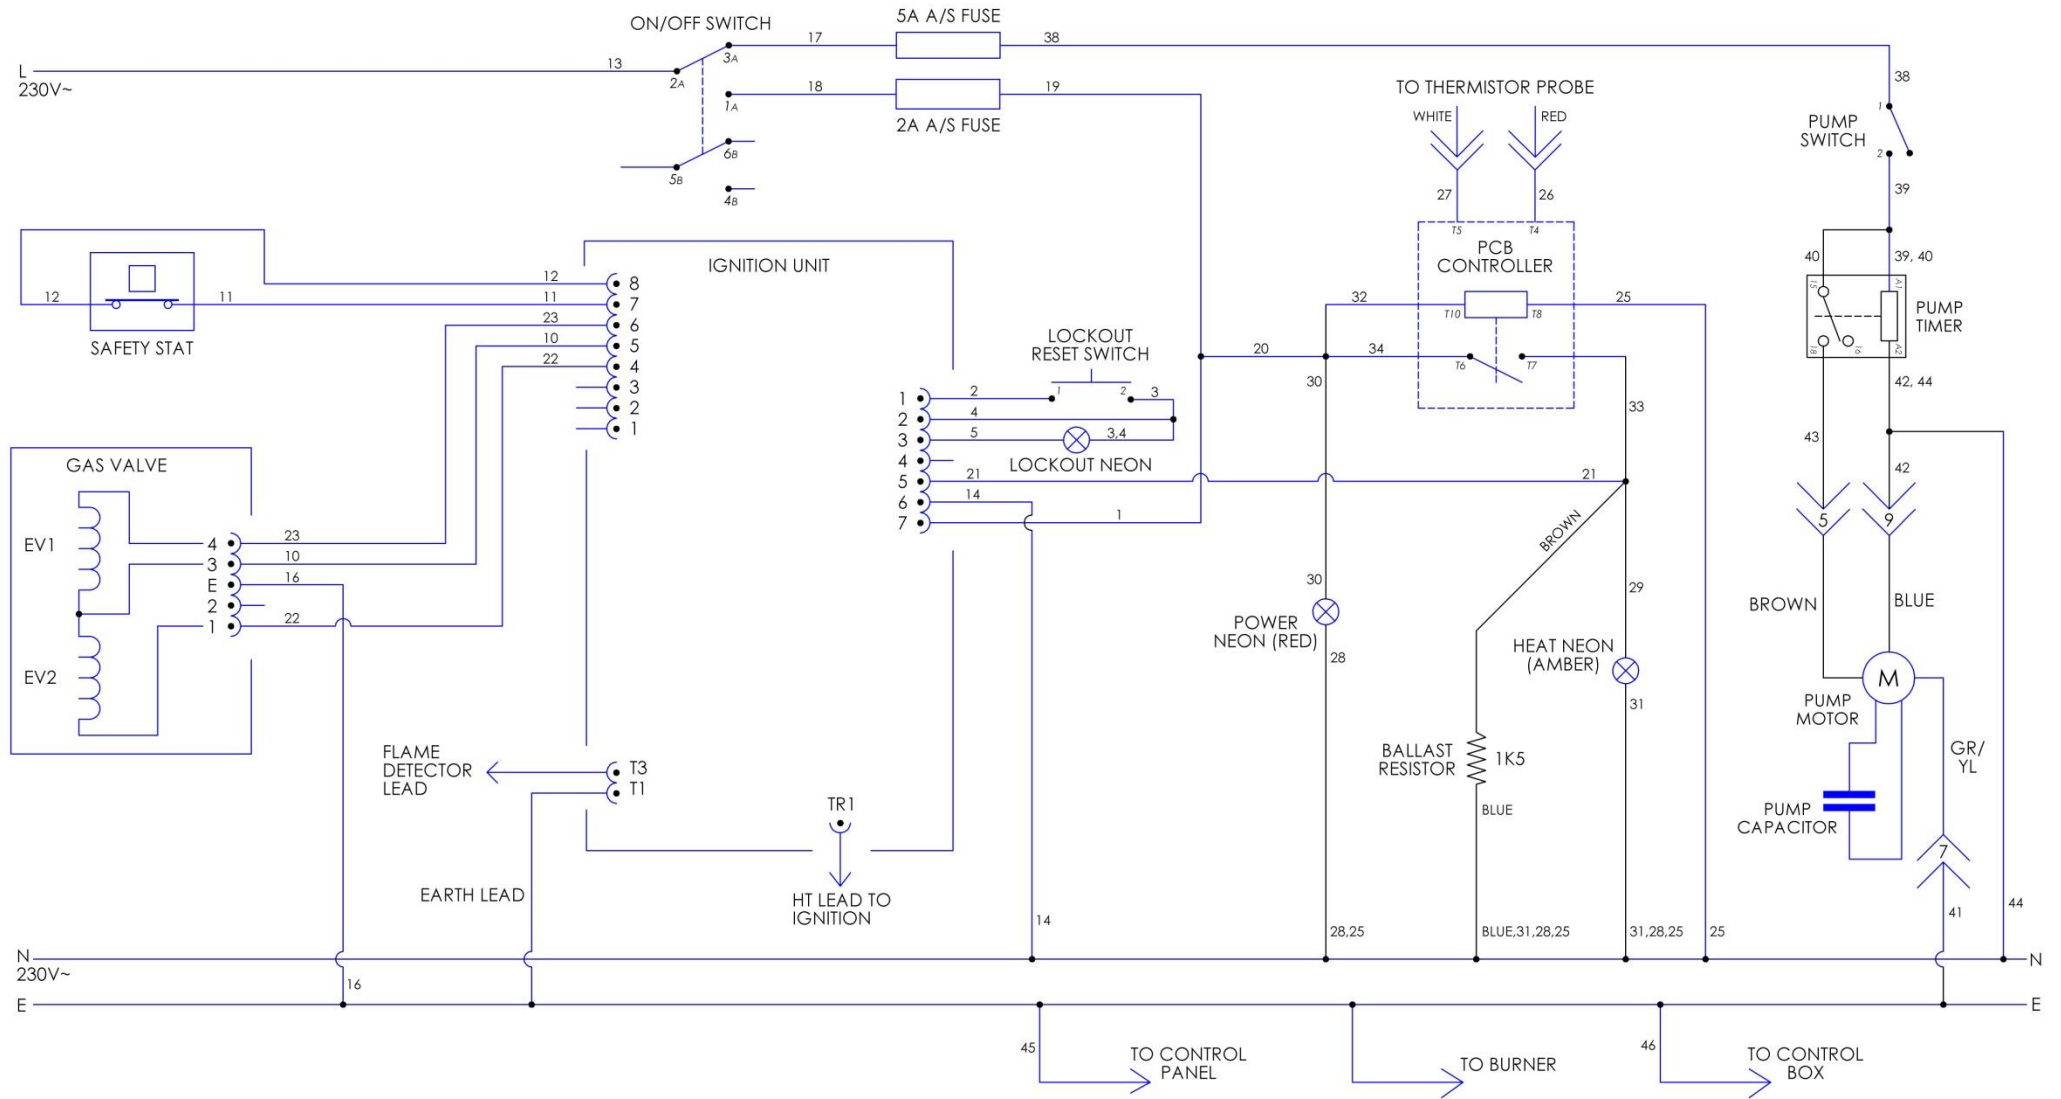

13.14 G3840FP CIRCUIT DIAGRAM

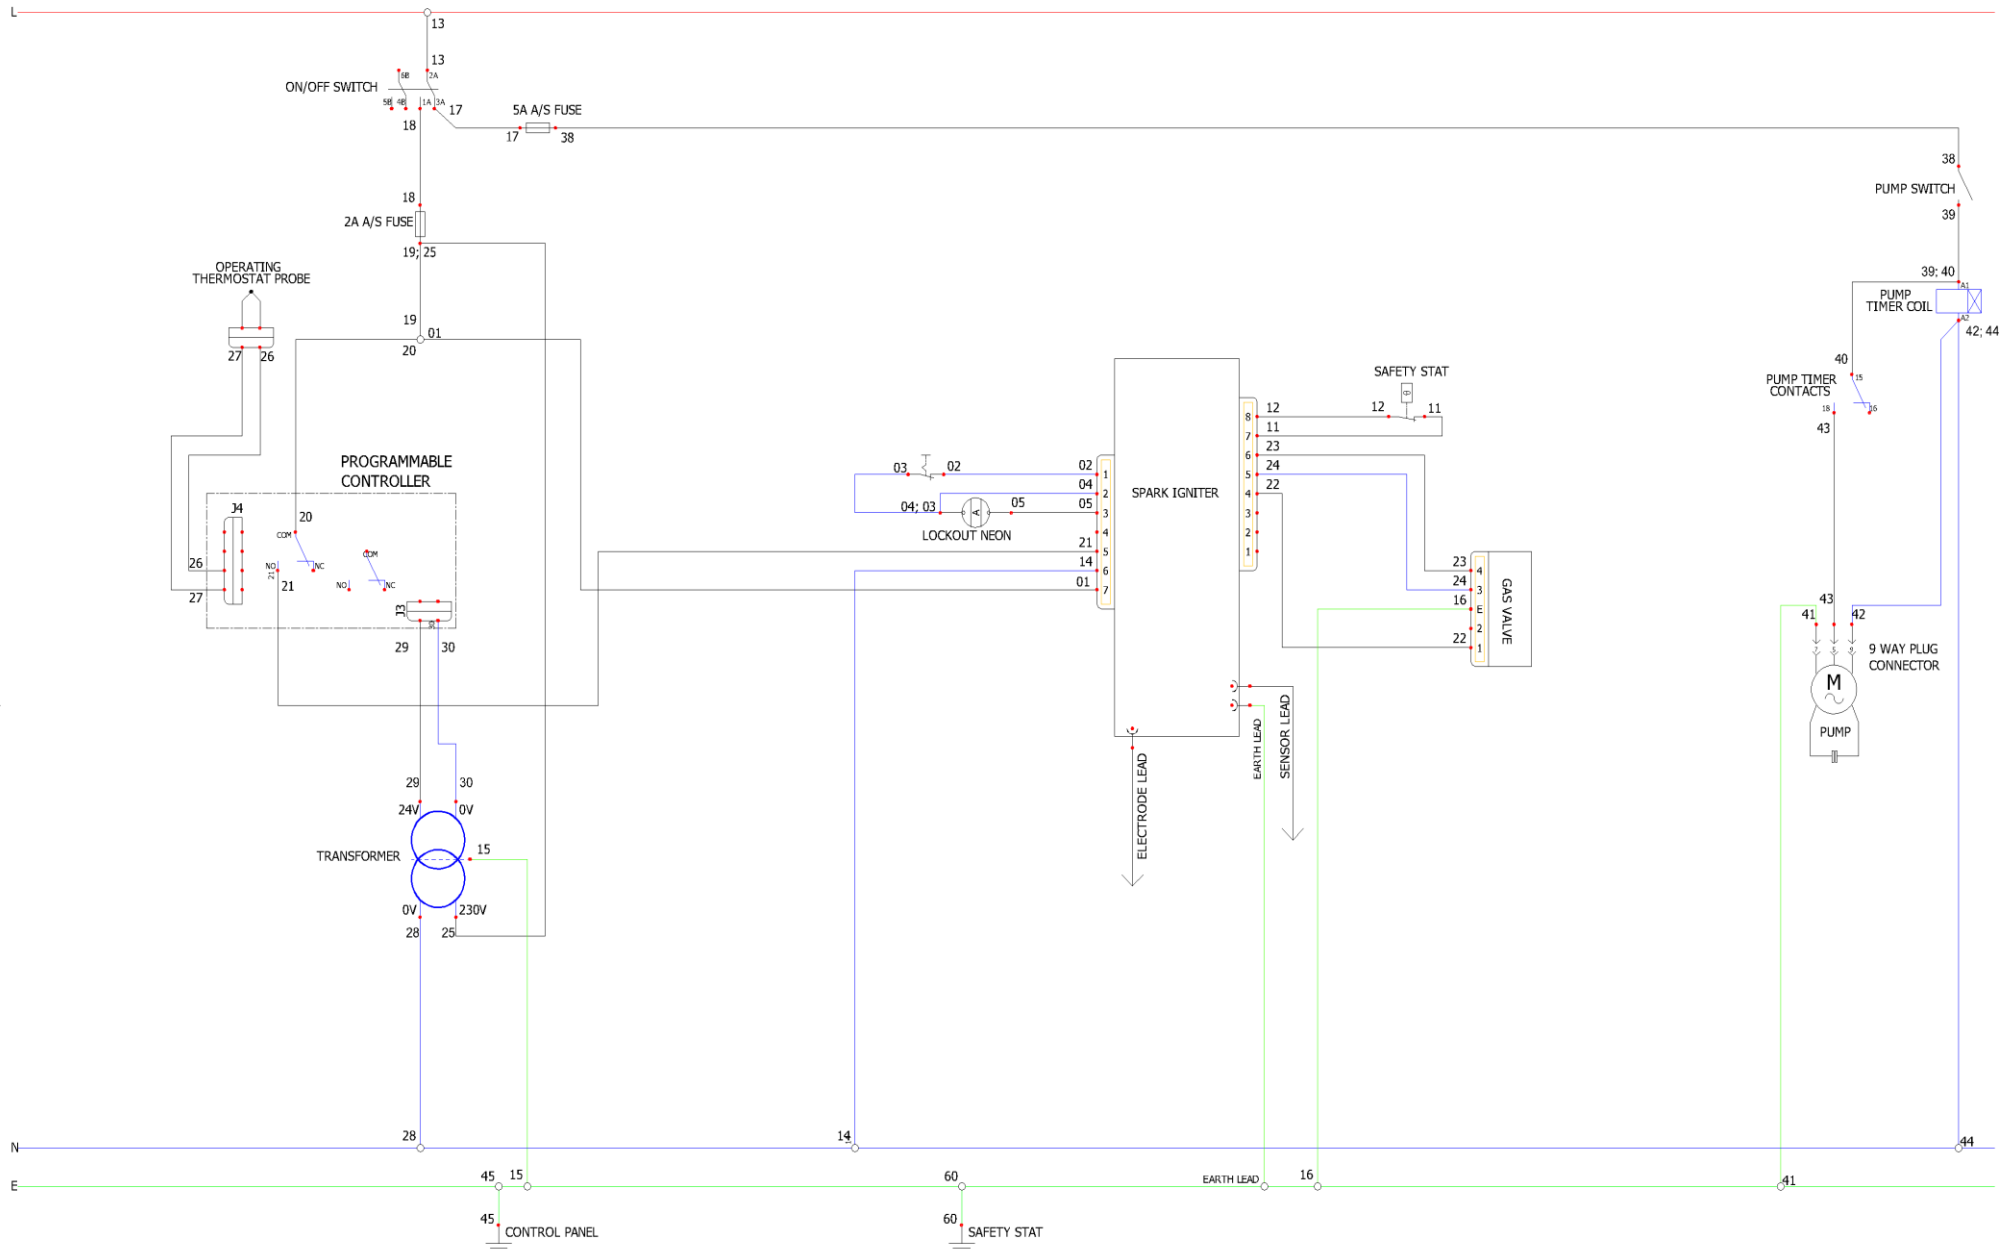

13.16 G3840FXP CIRCUIT DIAGRAM

