

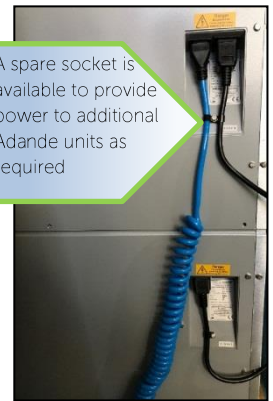
Quick Start Guide - Blast Chill



Getting Started...

Your Adande is shipped pre-installed with the appropriate mains cable(s) as pictured below. Only the cables supplied should be used with the appliance. Simply plug in and the Adande will come ON. The Adande is shipped & pre-set to cool to 3°C; this is a standard fridge operating temperature.

Please allow to run for 30 mins before opening the drawer for the first time



A spare socket is available to provide power to additional Adande units as required

Note your six digit serial number(s) for future reference

After registering the warranty, your Adande unit will be covered for parts and labour for 2 years from the date of purchase, subject to the terms of the warranty. If you have any query about your Adande unit, call the Adande Customer Care Helpline with your serial number and details of where/when you bought your Adande. Your serial number can be found on the back of the unit near the power cable. Most queries can be solved over the phone by one of our trained Adande Customer Care Helpline staff.

Alternatively, you can email your query to: service@adande.com general tips and useful information about Adande can be found in the operations manual supplied with the unit.

REGISTER YOUR FREE 2 YEAR WARRANTY TODAY




3 EASY WAYS TO REGISTER YOUR 2-YEAR WARRANTY

REGISTER BY PHONE **1** 

Call our dedicated Helpline
Open 9am-5pm. Mon-Fri
TEL: 01502 537135

REGISTER BY EMAIL **2** 

Email us with your serial number(s)
sales@adande.com

REGISTER BY POST **3** 





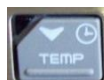

Complete & return the tear-off section of the warranty card (postage paid)

Quick Start Guide - Blast Chill
















Temperature Control

'H' Fridge Freezer Mode allows you to set the temperature from -22°C to +15°C

1. Ensure the controller is in standby mode, press and hold the flag button till the yellow light in the corner of the button goes out. 
2. Press the Program button to scroll through to program 'H' this will be illuminated on the screen in blue. 
3. To check the current set point, press the Set button once. The current set point will then be displayed on the screen. 
4. To change the set point simply press and hold the set button until 'SETH' starts to flash on the screen.
5. To adjust the set point use the up or down arrow keys till the desired temperature is displayed, then press the set button once to store.  
6. Finally press the flag button once to commence cooling. 

BLAST CHILL MODE – Your Adande has 4 pre-programmed blast chill cycles with varying degrees of time and intensity depending on your requirements. To select a program:

1. Ensure the controller is in standby mode, press and hold the Flag button till the yellow light in the corner of the button goes out. 
2. Press the Program button to scroll through to programs 1, 2, 3 or 4 which will be illuminated on the screen in blue. 
3. Once the desired program has been selected, simply press the Flag button once to commence the cycle. 
4. Press the down arrow Temp button once to display cycle time remaining. 

Food Type	Includes	Blast Chill Cycle	Time (minutes)
Meat 	Beef, pork, lamb, poultry & mince	Hard Cycle 2 or 4	90-120
Fish 	Fried, poached or baked haddock, plaice, salmon, cod fillets & shellfish	Soft Cycle 1	60-90
Prepared Dishes 	Stews, casseroles, lasagne, risotto and shepherd's pie	Hard Cycle 2 or 4	90-120
Vegetables & Pulses 	Steamed or roasted vegetables, rice and potatoes	Soft Cycle 1	60-90
Fruit 	Stewed and cooked fruits	Soft Cycle 1 or 3	60-120
Bakery 	Cakes	Soft Cycle 1	90-120
Bakery 	Pastries	Soft Cycle 1	60-90
Deserts 	Fruit based desserts & egg based flans	Soft Cycle 1	60-90
Deserts 	Sponge puddings and dense desserts such as cheesecake	Hard Cycle 2	60-90